


Quick Release Rotor Blade Changing Instructions

To remove a rotor blade:

1. Remove the pin assembly with a firm hammer blow at 'A'.
2. Remove the rotor blade.

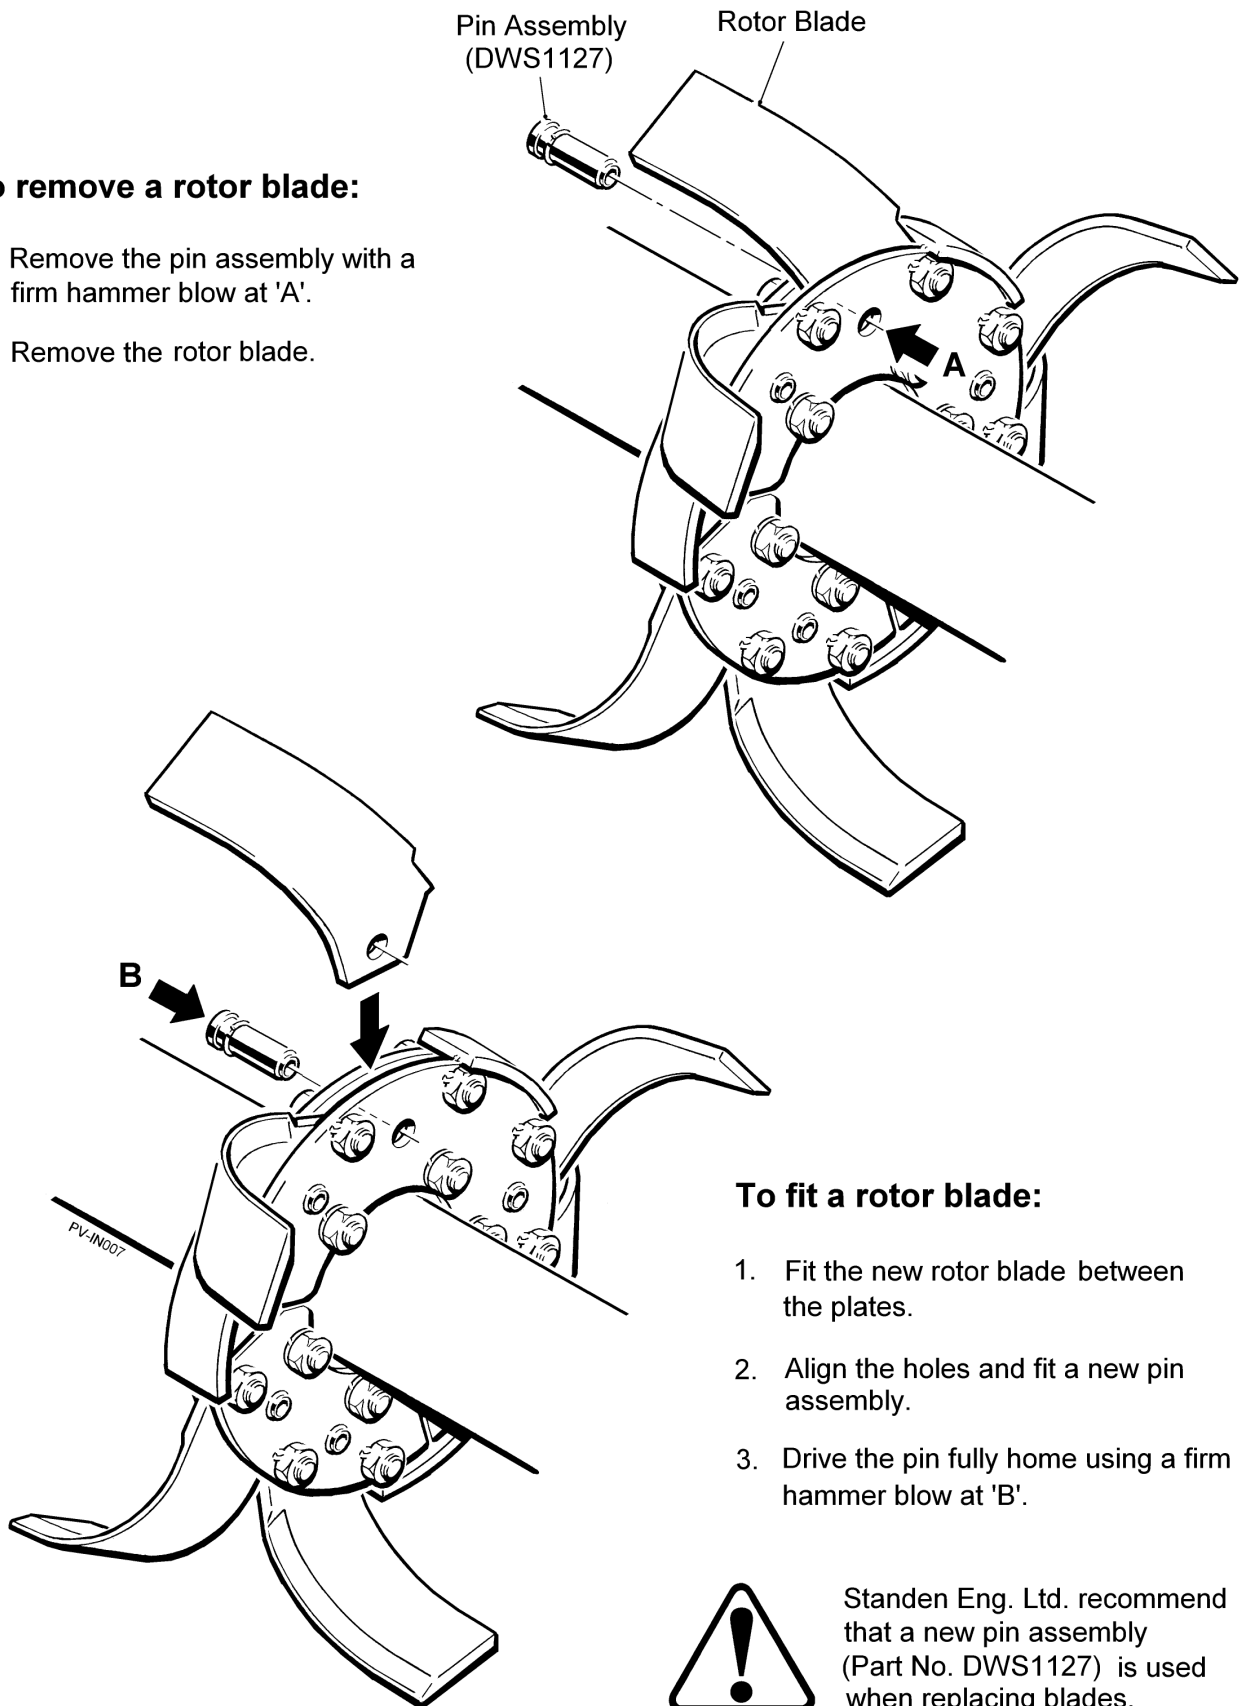

To fit a rotor blade:

1. Fit the new rotor blade between the plates.
2. Align the holes and fit a new pin assembly.
3. Drive the pin fully home using a firm hammer blow at 'B'.



Standen Eng. Ltd. recommend that a new pin assembly (Part No. DWS1127) is used when replacing blades.