

CONTENTS

 
SR300 PLANTER SPARE PARTS

Main Frame & Drawbar	2.1
Axle and Wheels (tilting)	2.2
Axle and Wheels (non-tilting)	2.3
Hopper (front section)	2.4
Hopper (rear section)	2.5
Conveyor Assemblies	2.6
Tunnel Assemblies	2.7
3-Row Opener Assemblies	2.8
Soil Retention Panels	2.10
Parallel Linkage Tool Bar	2.12
Adjustable Moulding Board	2.13
Hydraulics (space selector & conveyors)	2.17
Hydraulics (ram circuits)	2.18
Hydraulics (moulding board)	2.19
Road Lights	2.20
Automatic Space Selector	2.22
Depth Indicator	2.25

Note: When using the following pages to order replacement parts, please quote the full serial number of your machine.

Serial No. SR3120

Main Frame & Drawbar
Assy No 65981

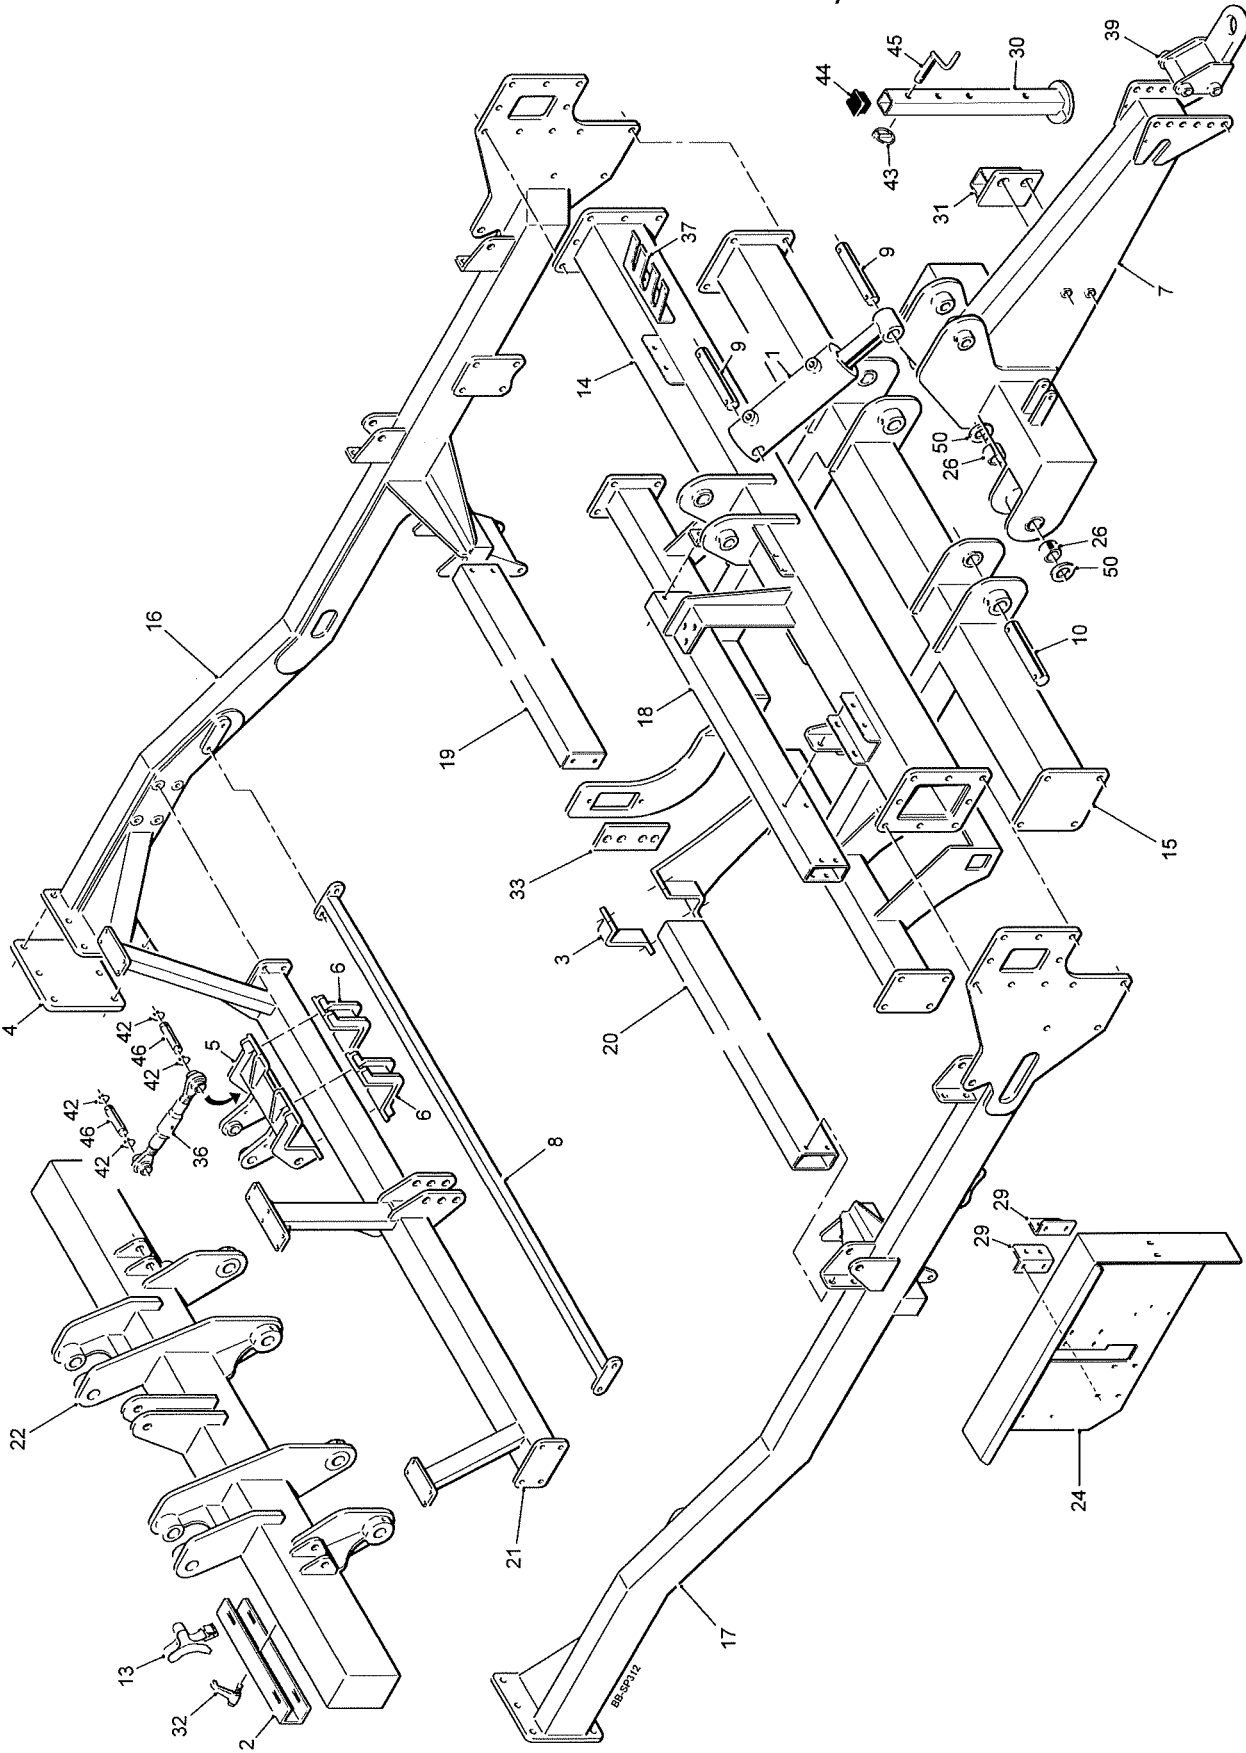

2.1a

SR SERIES PLANTER SPARE PARTS

Serial No. SR3120

Main Frame & Drawbar

Assy No 65981

Item	Part No.	Description	Qty.	Remarks
1	57135	Hydraulic Ram	1	
2				
3	65585	Clamp	1	
4	65731	Clamp Plate	2	
5	65759	Hopper Ram Mounting	2	
6	65760	Clamp Bracket	4	
7	65870	Drawbar	1	
8	65884A	Conveyor Support Beam	1	
9	65904	Ram Pivot Pin	2	
10	65905	Drawbar Pivot Pin	2	
11				
12	65910	Hopper Ram Prop	2	
13	65911	Securing Strap	4	
14	65912	Front Beam	1	
15	65913	Opener Mounting Beam	1	
16	65914	Side Frame LH	1	
17	65915	Side Frame RH	1	
18	65916A	Tunnel Support Beam	1	
19	65917A	Tunnel Support Beam LH	1	
20	65918A	Tunnel Support Beam RH	1	
21	65919	Hopper Support Beam	1	
22	65920	Rear Beam	1	
23				
24	65922	Electric/Hydraulic Panel	1	
25				
26	65900	Bronze Bush	4	
27				
28				
29	72113	Panel Bracket	2	
30	72184	Stand	1	
31	72185	Stand Bracket	1	
32	72034	Locking Handle	2	
33	72044	Clamp Plate	1	
34				
35				
36	DW208007970	Top Link Assembly	2	
37	DWS1380B	Hose Carrier	1	
38				
39	RPA610.300014	Drawbar Eye	1	
40				
41				
42	RPF200.025200	Ø25 External Circlip	8	
43	DW 50934	Clip Pin	1	
44	DWS871	Plastic Insert (70x70)	1	
45	DWS597	Stand Pin	1	
46	RPM146.306627	Pivot Pin	4	
47				
48				
49				
50	SS060041/004	Steel Spacer	4	


SR SERIES PLANTER SPARE PARTS	2.1
--------------------------------------	------------

2.1

Machines from Serial No. SR3127

Main Frame & Drawbar

 Assy No 72229

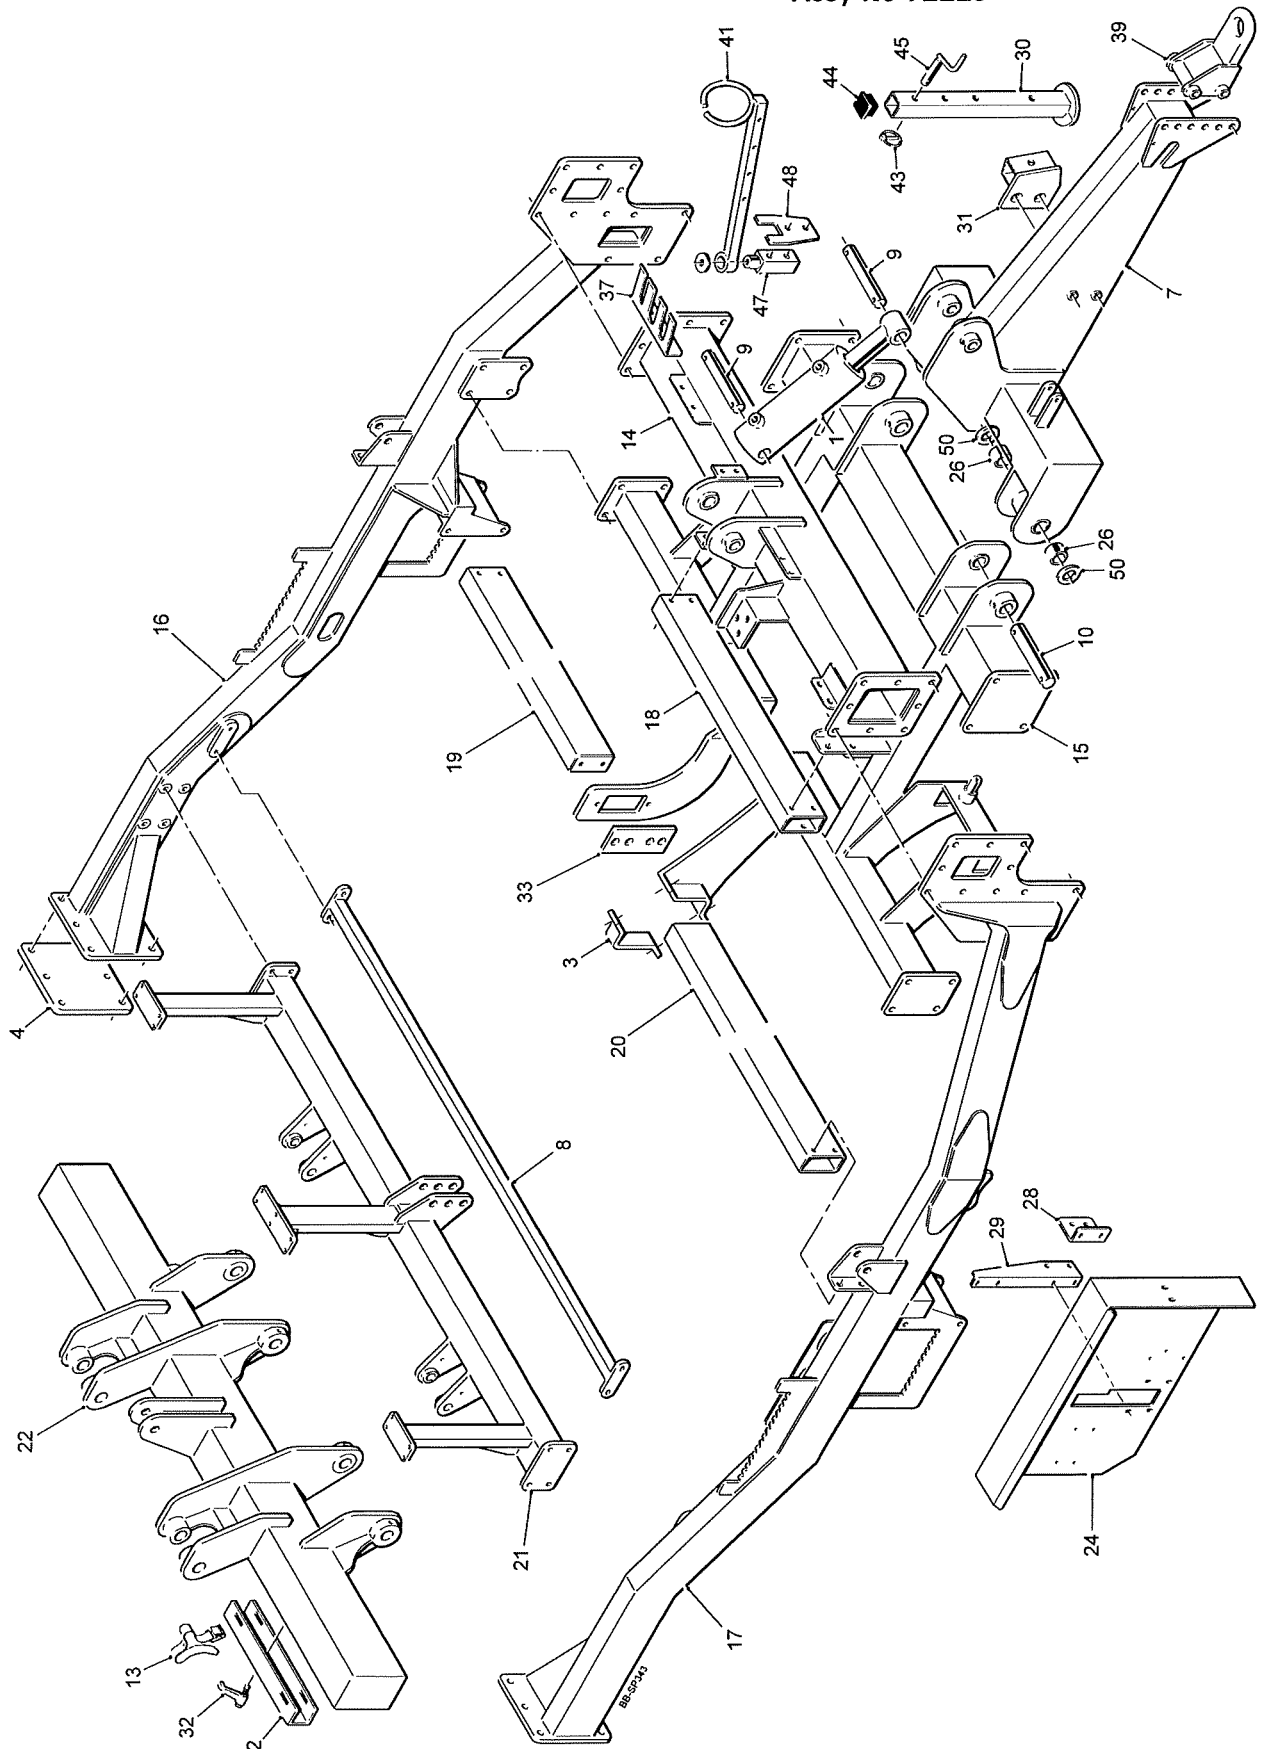

2.1a**SR SERIES PLANTER SPARE PARTS**

Machines from Serial No. SR3127


Main Frame & Drawbar**Assy No 72229**

Item	Part No.	Description	Qty.	Remarks
1	57135	Hydraulic Ram	1	
2				
3	65585	Clamp	1	
4	65731	Clamp Plate	2	
5				
6				
7	65870	Drawbar	1	
8	65884A	Conveyor Support Beam	1	
9	65904	Ram Pivot Pin	2	
10	65905	Drawbar Pivot Pin	2	
11				
12	65910	Hopper Ram Prop	2	
13	65911	Securing Strap	4	
14	65912A	Front Beam	1	
15	65913A	Opener Mounting Beam	1	
16	65914A	Side Frame LH	1	
17	65915A	Side Frame RH	1	
18	65916B	Tunnel Support Beam	1	
19	65917A	Tunnel Support Beam LH	1	
20	65918A	Tunnel Support Beam RH	1	
21	72220	Hopper Support Beam	1	
22	65920	Rear Beam	1	
23				
24	65922	Electric/Hydraulic Panel	1	
25				
26	65900	Bronze Bush	4	
27				
28	72113	Panel Bracket	1	
29	72113A	Panel Bracket	1	
30	72184	Stand	1	
31	72185	Stand Bracket	1	
32	72034	Locking Handle	2	
33	72044	Clamp Plate	1	
34				
35				
36				
37	DWS1380B	Hose Carrier	1	
38				
39	RPA610.300014	Drawbar Eye	1	
40				
41	59570	Hose Support Arm	1	
42				
43	DW50934	Clip Pin	1	
44	DWS871	Plastic Insert (70x70)	1	
45	DWS597	Stand Pin	1	
46				
47	RPS230	Pivot Block	1	
48	RPS232	Stop Plate	1	
49				
50	SS060041/004	Steel Spacer	4	

Serial No. SR3120

Axle and Wheels (Tilting)

 Assy No 65931

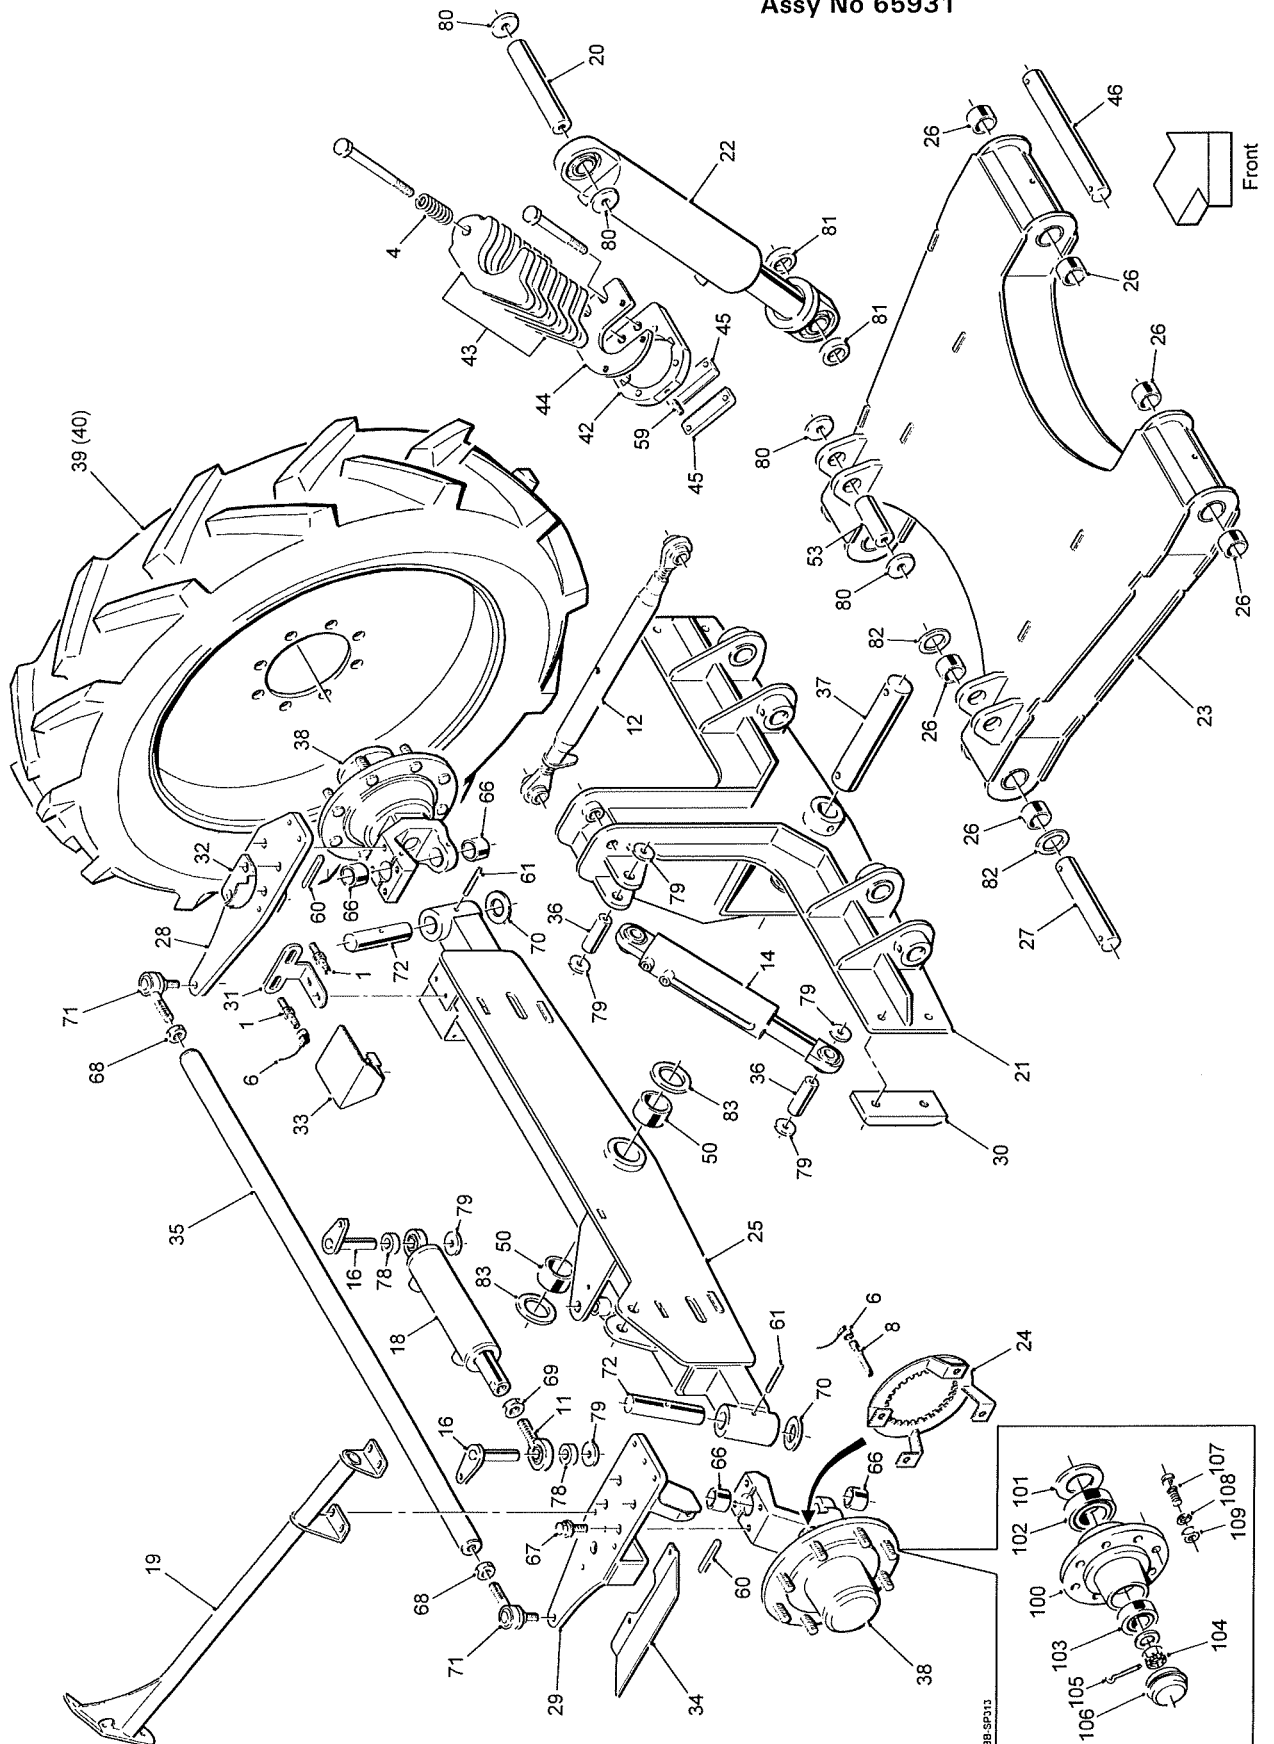

2.2a

SR SERIES PLANTER SPARE PARTS

Serial No. SR3120

Axle and Wheels (Tilting)

Assy No 65931

Item	Part No.	Description	Qty.	Remarks
1	41504	Proximity Sensor	2	(see list at end)
2				
3				
4	17127	Compression Spring	1	
5				
6	32037/4	Sensor Cable 90° (10m)	3	
7				
8	36124	Proximity Sensor	1	
9				
10				
11	57035	Male Rod End	1	
12	58206	Top Link Assembly	1	
13				
14	59626	Hydraulic Ram	1	
15				
16	61046B	Ø25 Pivot Pin	2	
17				
18	65699	Hydraulic Ram	1	
19	65703	Light Bracket	2	
20	65823	Ø40 Ram Pin	2	
21	65854	Axle Pivot Bracket	1	
22	65855	Hydraulic Ram	2	
23	65871	Axle Cross Brace	1	
24	65872	Sensor Wheel	1	
25	65897	Axle Beam	1	
26	65900	Bronze Bush	8	
27	65905	Ø40 Pivot Pin	2	
28	65940	Axle Arm LH	1	
29	65941	Axle Arm RH	1	
30	65942	Guide Strip	2	
31	65946A	Sensor Bracket	1	
32	72181	Sensor Target Plate	1	
33	72264	Sensor Guard	1	
34	65950	Sensor Shield	1	
35	65951	Track Rod	1	
36	65952	Ø25 Ram Pin	2	
37	65953	Ø50 Axle Pivot Pin	1	
38	65954	Stub Axle Assembly	2	
39	65955L	Wheel Assembly (230/95R32)	1	
40	65955R	Wheel Assembly (230/95R32)	1	
41				
42	65958	Ram Stop Mount	2	
43	65959/20	Ram Stop (20mm)	12	
44	65960	Ram Stop Retaining Plate	2	
45	65961	Anti-Twist Plate	4	
46	65998	Ø40 Pivot Pin	2	
47				
48				
49				
50	69038	Bronze Bush	2	
51				
52				
53	72045	Ø40 Ram Pin	2	
54				
55				

 
2.2b

Axle and Wheels (Tilting)

[illegible]

Axle and Wheels (Non-Tilting)

Assy No 72259

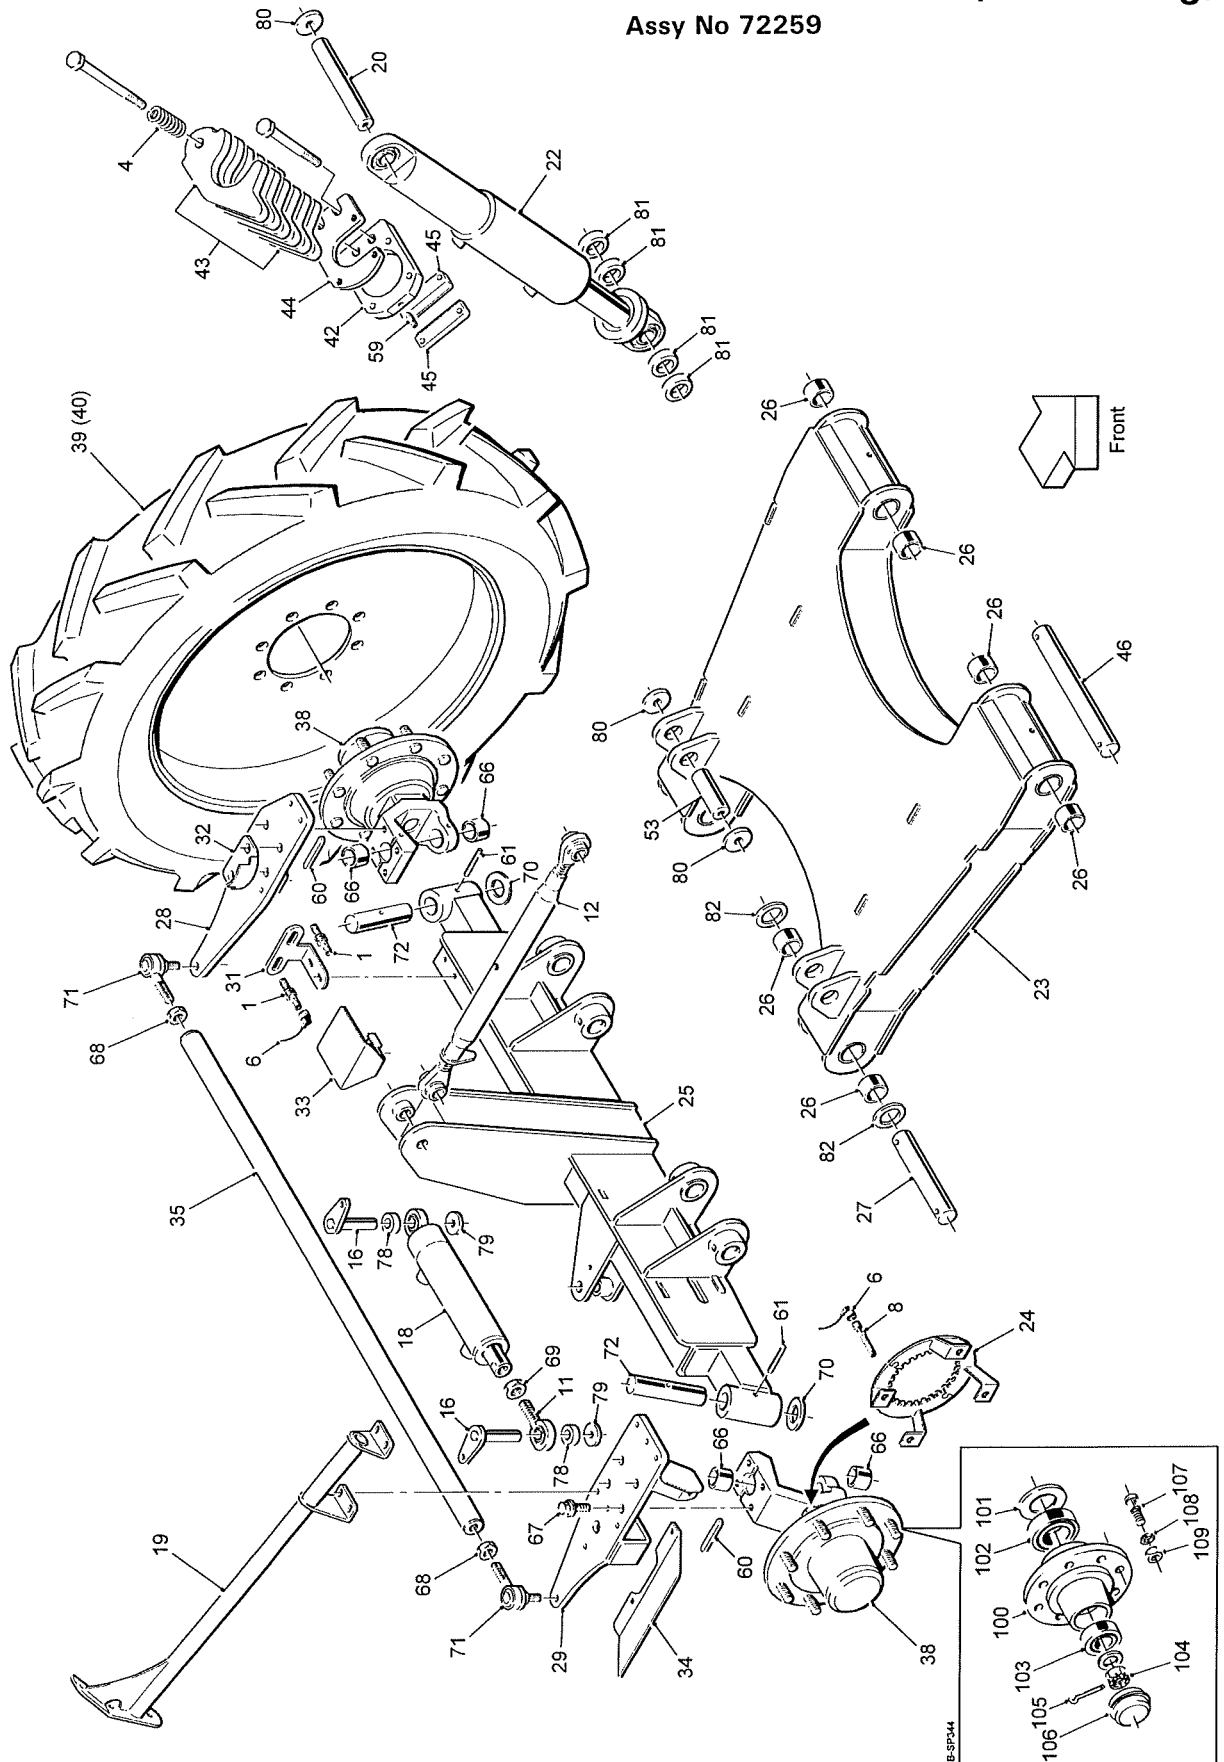

2.3a

SR SERIES PLANTER SPARE PARTS

Axle and Wheels (Non-Tilting)

Assy No 72259

Item	Part No.	Description	Qty.	Remarks
1	41504	Proximity Sensor	2	
2				
3				
4	17127	Compression Spring	1	
5				
6	32037/4	Sensor Cable 90° (10m)	3	
7				
8	36124	Proximity Sensor	1	
9				
10				
11	57035	Male Rod End	1	
12	58206	Top Link Assembly	1	
13				
14				
15				
16	61046B	Ø25 Pivot Pin	2	
17				
18	65699A	Hydraulic Ram	1	
19	65703	Light Bracket	2	
20	65823A	Ø30 Ram Pin	2	
21				
22	72260	Hydraulic Ram	2	
23	65871A	Axle Cross Brace	1	
24	65872	Sensor Wheel	1	
25	72258	Axle Beam	1	
26	65900	Bronze Bush	8	
27	65905	Ø40 Pivot Pin	2	
28	65940	Axle Arm LH	1	
29	65941	Axle Arm RH	1	
30				
31	65946A	Sensor Bracket	1	
32	72181	Sensor Target Plate	1	
33	72264	Sensor Guard	1	
34	65950	Sensor Shield	1	
35	65951	Track Rod	1	
36				
37				
38	65954	Stub Axle Assembly	2	(see list at end)
39	65955L	Wheel Assembly (230/95R32)	1	
40	65955R	Wheel Assembly (230/95R32)	1	
41				
42	65958A	Ram Stop Mount	2	
43	65959A/20	Ram Stop (20mm)	12	
44	65960A	Ram Stop Retaining Plate	2	
45	65961A	Anti-Twist Plate	4	
46	65998	Ø40 Pivot Pin	2	
47				
48				
49				
50				
51				
52				
53	72045A	Ø30 Ram Pin	2	
54				
55				

SR SERIES PLANTER SPARE PARTS

2.3b

 
Axle and Wheels (Non-Tilting)

Assy No 72259

[illegible]

Serial No. SR3120

Hopper (front section)
Part of Assy No 65925

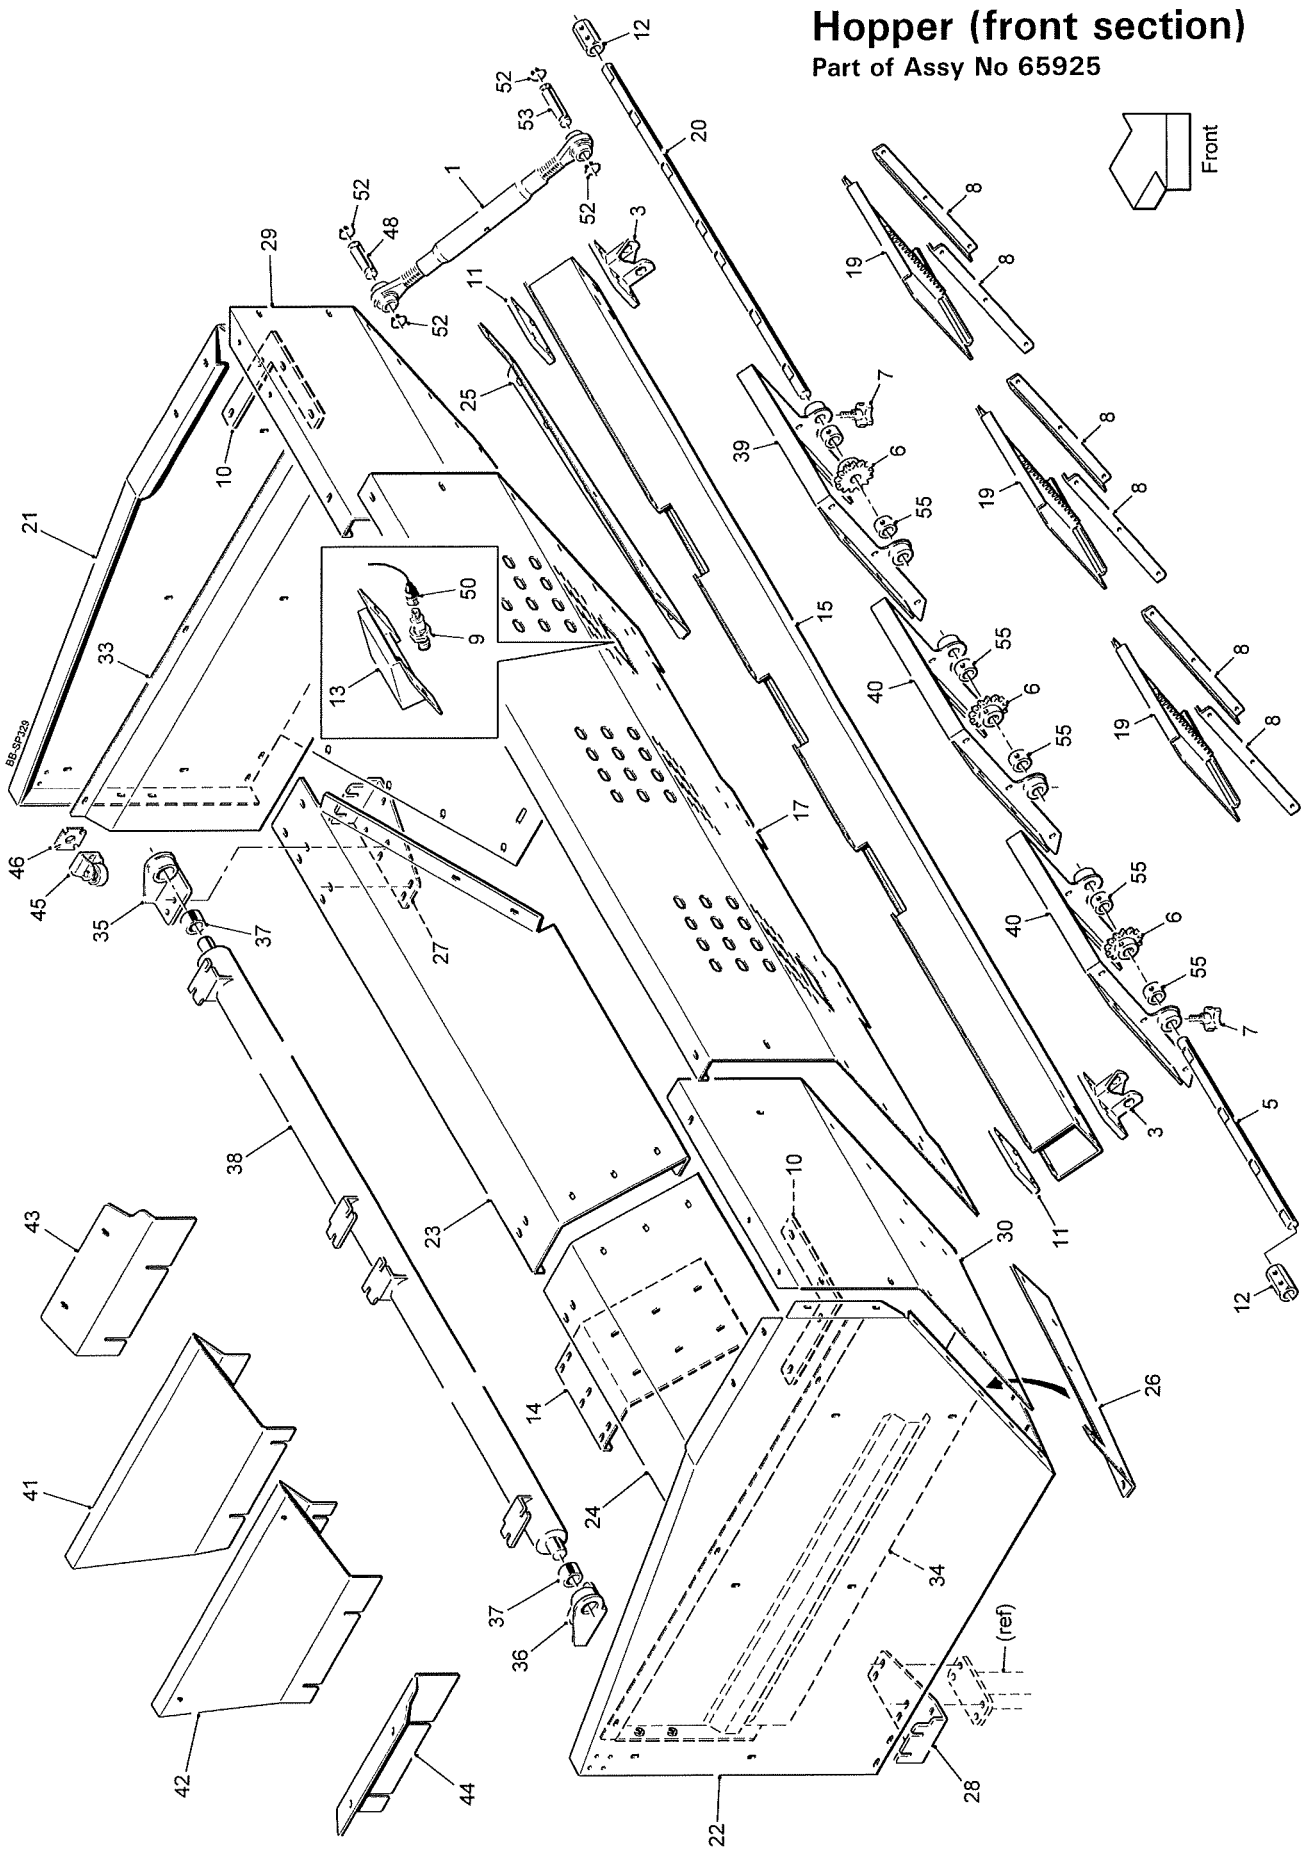

2.4a**SR SERIES PLANTER SPARE PARTS**

Serial No. SR3120


Hopper (front section)

Part of Assy No 65925

Item	Part No.	Description	Qty.	Remarks
1	43048	Adjustable Link	2	
2				
3	61964	Stay Bracket	2	
4				
5	65665	Adjuster Shaft (short)	2	
6	65666	Pinion Gear	3	
7	65669	Locking Knob	2	
8	72139	Gate Guide	6	
9	65727	Photo Electric Sensor	2	
10	65748	Corner Plate	2	
11	65761	Clamp Plate (tapped)	2	
12	65780	Adjuster Nut	3	
13	65821	Sensor Mounting	2	
14	72149	Rear Panel Joiner	1	
15	65840A	Support Channel	1	
16				
17	65924	Front Panel Centre Plate	1	
18				
19	72140	Regulator Gate	3	
20	72151	Adjuster Shaft (long)	1	
21	72143	Side Panel LH	1	
22	72144	Side Panel RH	1	
23	72145	Rear Panel LH	1	
24	72146	Rear Panel RH	1	
25	72147	Corner Plate LH	1	
26	72148	Corner Plate RH	1	
27	65975	Support Angle LH	1	
28	65976	Support Angle RH	1	
29	65977	Front Panel LH	1	
30	65978	Front Panel RH	1	
31				
32				
33	72013A	Strengthen Side Panel LH	1	
34	72014A	Strengthen Side Panel RH	1	
35	72019	Hopper Pivot LH	1	
36	72021	Hopper Pivot RH	1	
37	72023	Bronze Bush	2	
38	72033	Hopper Pivot Tube	1	
39	72137A	Regulator Gate Frame LH	1	
40	72138A	Regulator Gate Frame RH	2	
41	72150L	Divider Panel LH	1	
42	72150R	Divider Panel RH	1	
43	72152	Infill Panel LH	1	
44	72153	Infill Panel RH	1	
45	72230	Castor Wheel	2	
46	72231	Castor Wheel Spacer	a/r	
47				
48	DWS723	Pin (short)	2	
49				
50	JK63720/2	Sensor Cable Straight (5m)	2	
51				
52	RPF200.025200	Ø25 External Circlip (1.2mm thick)	8	
53	RPM146.306627	Pin (long)	2	
54				
55	W0979	Locking Collar	6	

Machines from Serial No. SR3127

 Hopper (front section)
Part of Assy No 65925

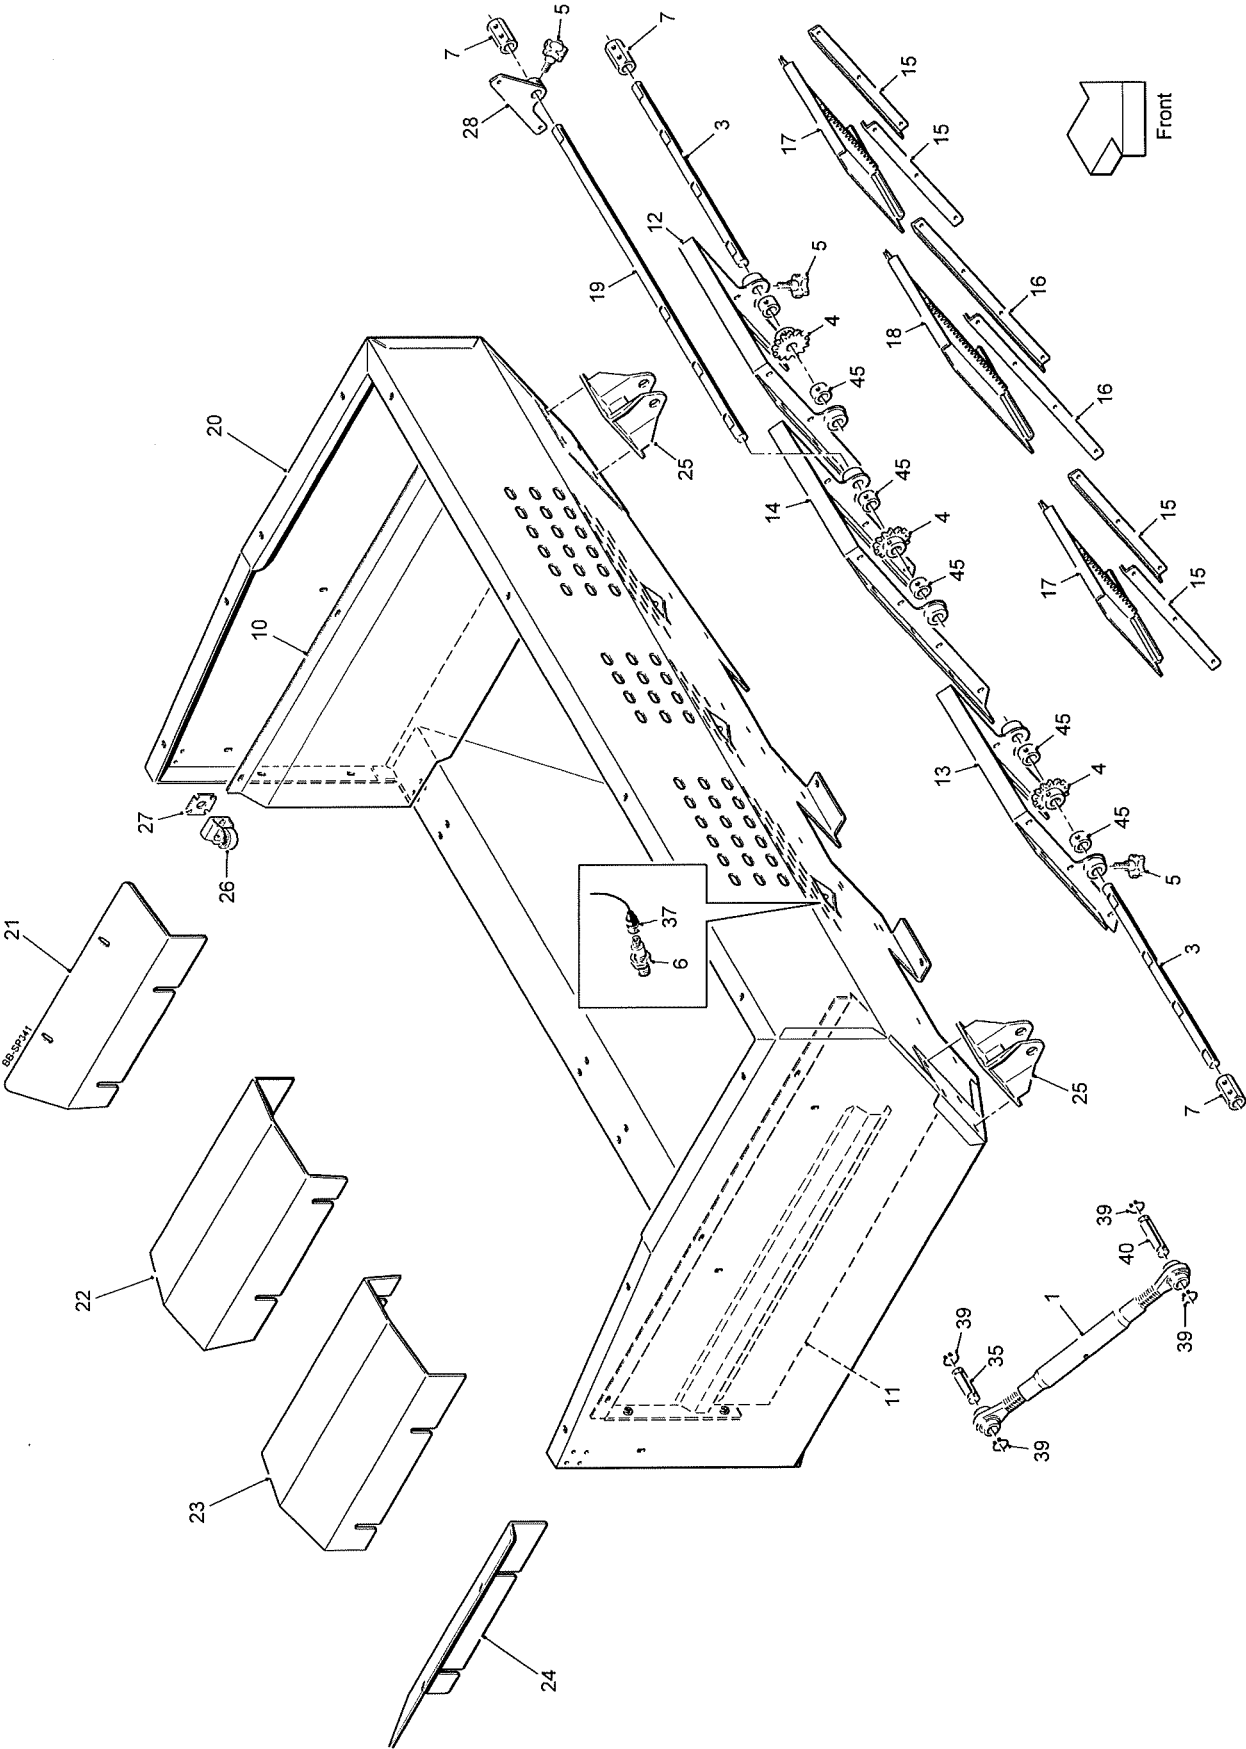

2.4a**SR SERIES PLANTER SPARE PARTS**

Machines from Serial No. SR3127

Hopper (front section)


Part of Assy No 65925

Item	Part No.	Description	Qty.	Remarks
1	43048	Adjustable Link	2	
2				
3	65665	Adjuster Shaft (short)	2	
4	65666	Pinion Gear	3	
5	65669	Locking Knob	3	
6	65727	Photo Electric Sensor	3	
7	65780	Adjuster Nut	3	
8				
9				
10	72013B	Inner Hopper Panel LH	1	
11	72014B	Inner Hopper Panel RH	1	
12	72137A	Regulator Gate Frame LH	1	
13	72138A	Regulator Gate Frame RH	1	
14	72138B	Regulator Gate Frame Centre	1	
15	72139	Gate Guide	4	
16	72139A	Gate Guide Centre	2	
17	72140	Regulator Gate	2	
18	72140A	Regulator Gate Centre	1	
19	72151	Adjuster Shaft (long)	1	
20	72221	Front Hopper	1	
21	72223	Infill Panel LH	1	
22	72224	Centre Infill Panel LH	1	
23	72225	Centre Infill Panel RH	1	
24	72226	Infill Panel RH	1	
25	72227	Stay Bracket	2	
26	72230	Castor Wheel	2	
27	72231	Castor Wheel Spacer	a/r	
28	72242	Adjuster Shaft Support Bracket	1	
29				
30				
31				
32				
33				
34				
35	DWS723	Pin (short)	2	
36				
37	JK63720/2	Sensor Cable Straight (5m)	3	
38				
39	RPF200.025200	Ø25 External Circlip	8	
40	RPM146.306627	Pin (long)	4	
41				
42				
43				
44				
45	W0979	Locking Collar	6	

Serial No. SR3120

Hopper (rear section)

 Part of Assy No 65925

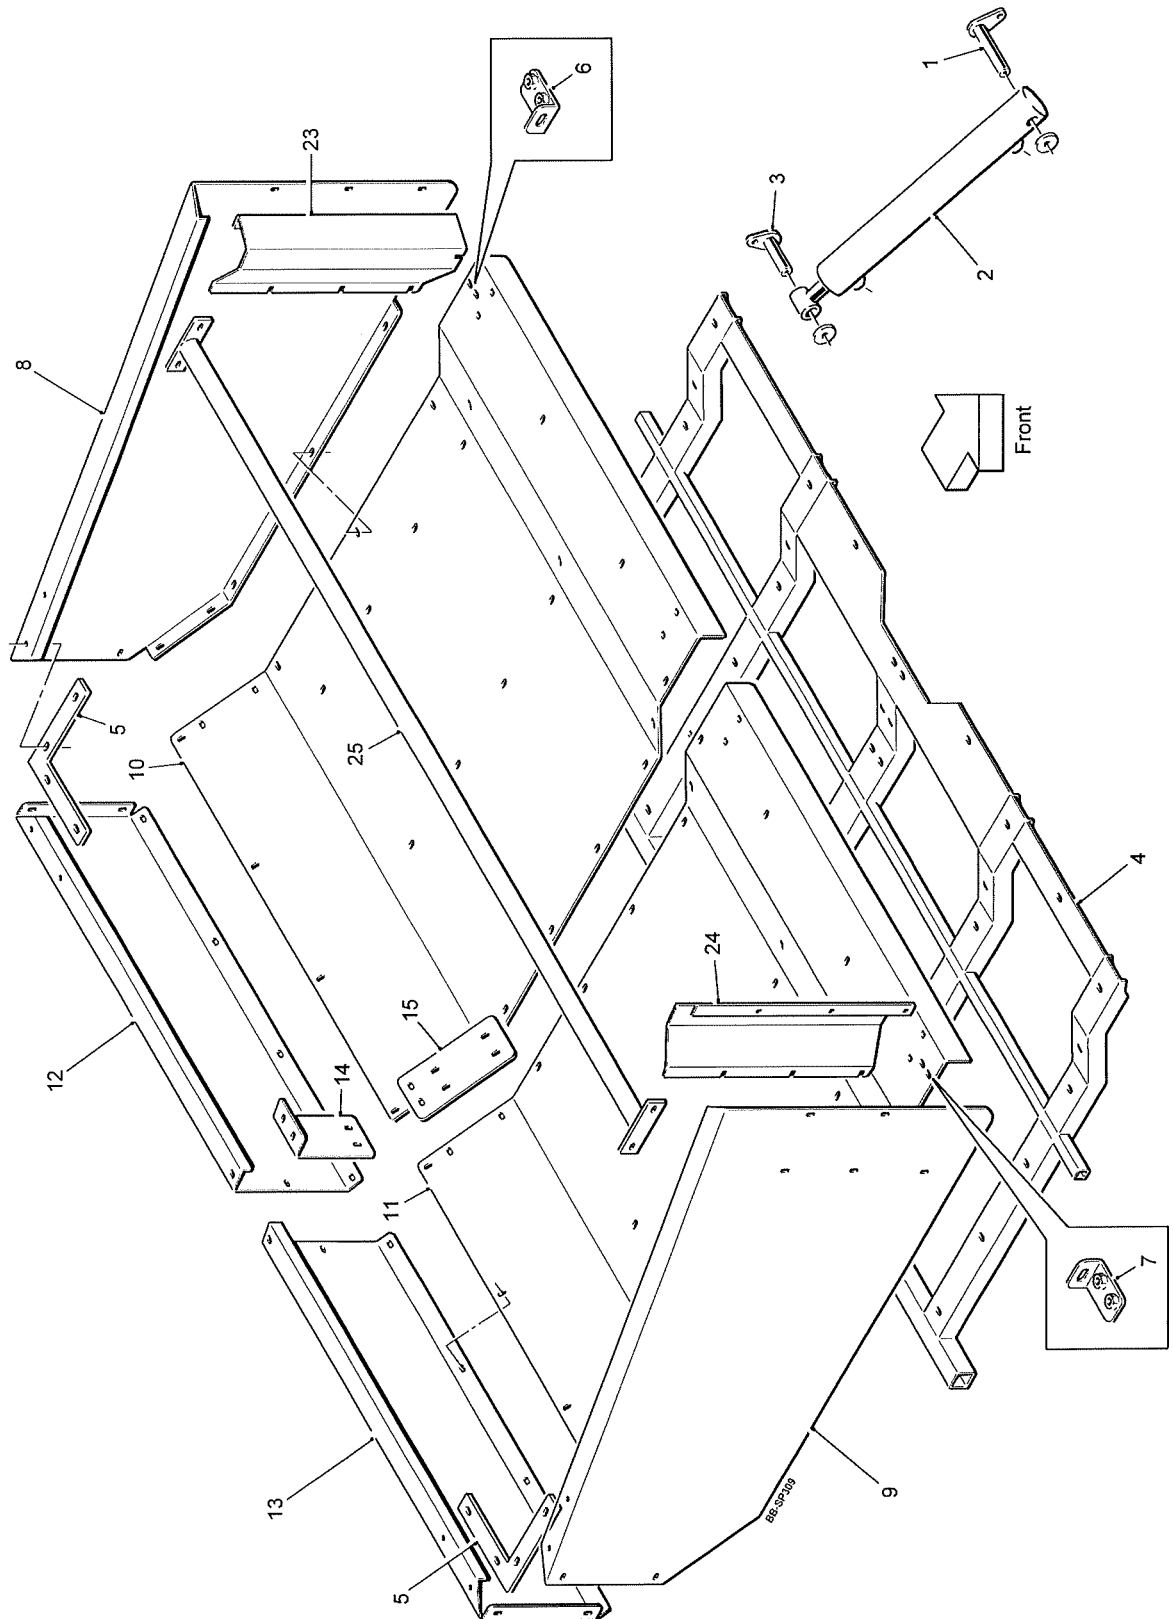

2.5a

SR SERIES PLANTER SPARE PARTS

Serial No. SR3120


Hopper (rear section)

Part of Assy No 65925

Item	Part No.	Description	Qty.	Remarks
1	65010	Ram Pin (long)	2	
2	65212	Hydraulic Ram	2	
3	65214	Ram Pin (short)	2	
4	65740A	Tipping Hopper Support Frame	1	
5	65748	Corner Plate	2	
6	65749	Fixing Bracket LH	1	
7	65750	Fixing Bracket RH	1	
8	65841A	Side Panel LH	1	
9	65842A	Side Panel RH	1	
10	65927	Base Panel LH	1	
11	65928	Base Panel RH	1	
12	65929	Rear Panel LH	1	
13	65930	Rear Panel RH	1	
14	65933	Panel Joiner	1	
15	65934	Panel Joiner	1	
16				
17				
18				
19				
20				
21				
22				
23	72015A	Corner Panel LH	1	
24	72016A	Corner Panel RH	1	
25	72204	Hopper Brace	1	

Machines from Serial No. SR3127

 Hopper (rear section)
Part of Assy No 65925

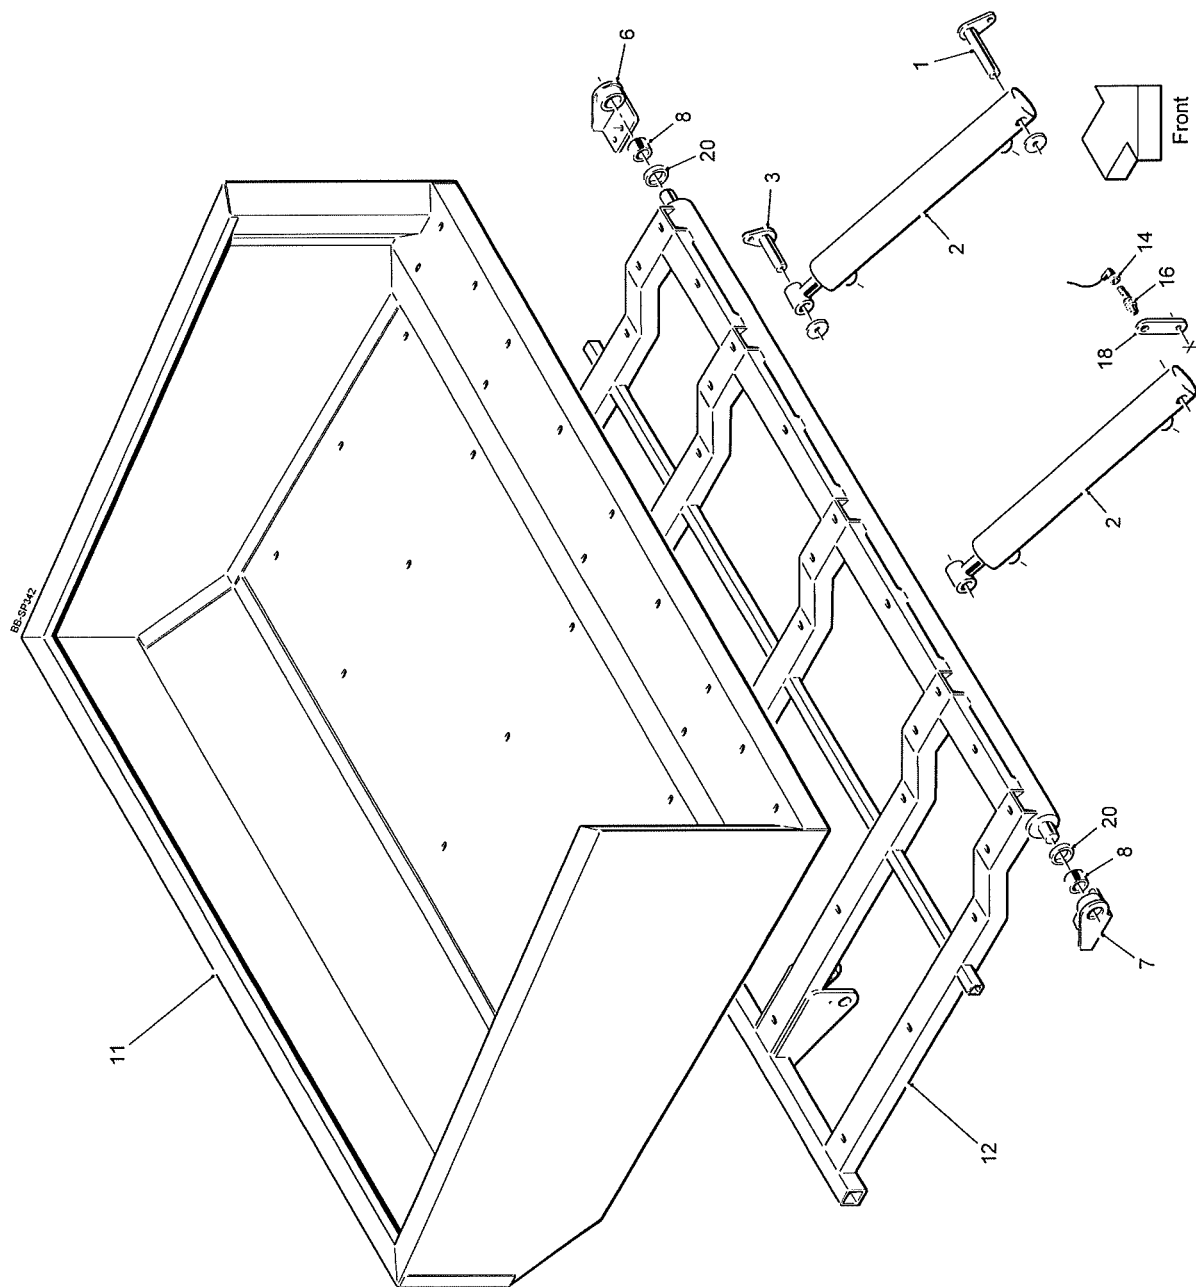

2.5a

SR SERIES PLANTER SPARE PARTS

Machines from Serial No. SR3127


Hopper (rear section)

Part of Assy No 65925

Item	Part No.	Description	Qty.	Remarks
1	65010	Ram Pin (long)	2	
2	65212	Hydraulic Ram	2	
3	65214	Ram Pin (short)	2	
4				
5				
6	72019	Hopper Pivot Plate LH	1	
7	72021	Hopper Pivot Plate RH	1	
8	72023	Bronze Bush	2	
9				
10				
11	72222	Rear Hopper	1	
12	72228	Tipping Hopper Support Frame	1	
13				
14	32037/4	Sensor Cable 90°(10m)	1	
15				
16	41504	Proximity Sensor	1	
17				
18	56539	Sensor Mounting	1	
19				
20	SS051041/008	Steel Spacer	2	

Serial No. SR3120

 Conveyor Assemblies
Assy No 72125, 72126 & 65926

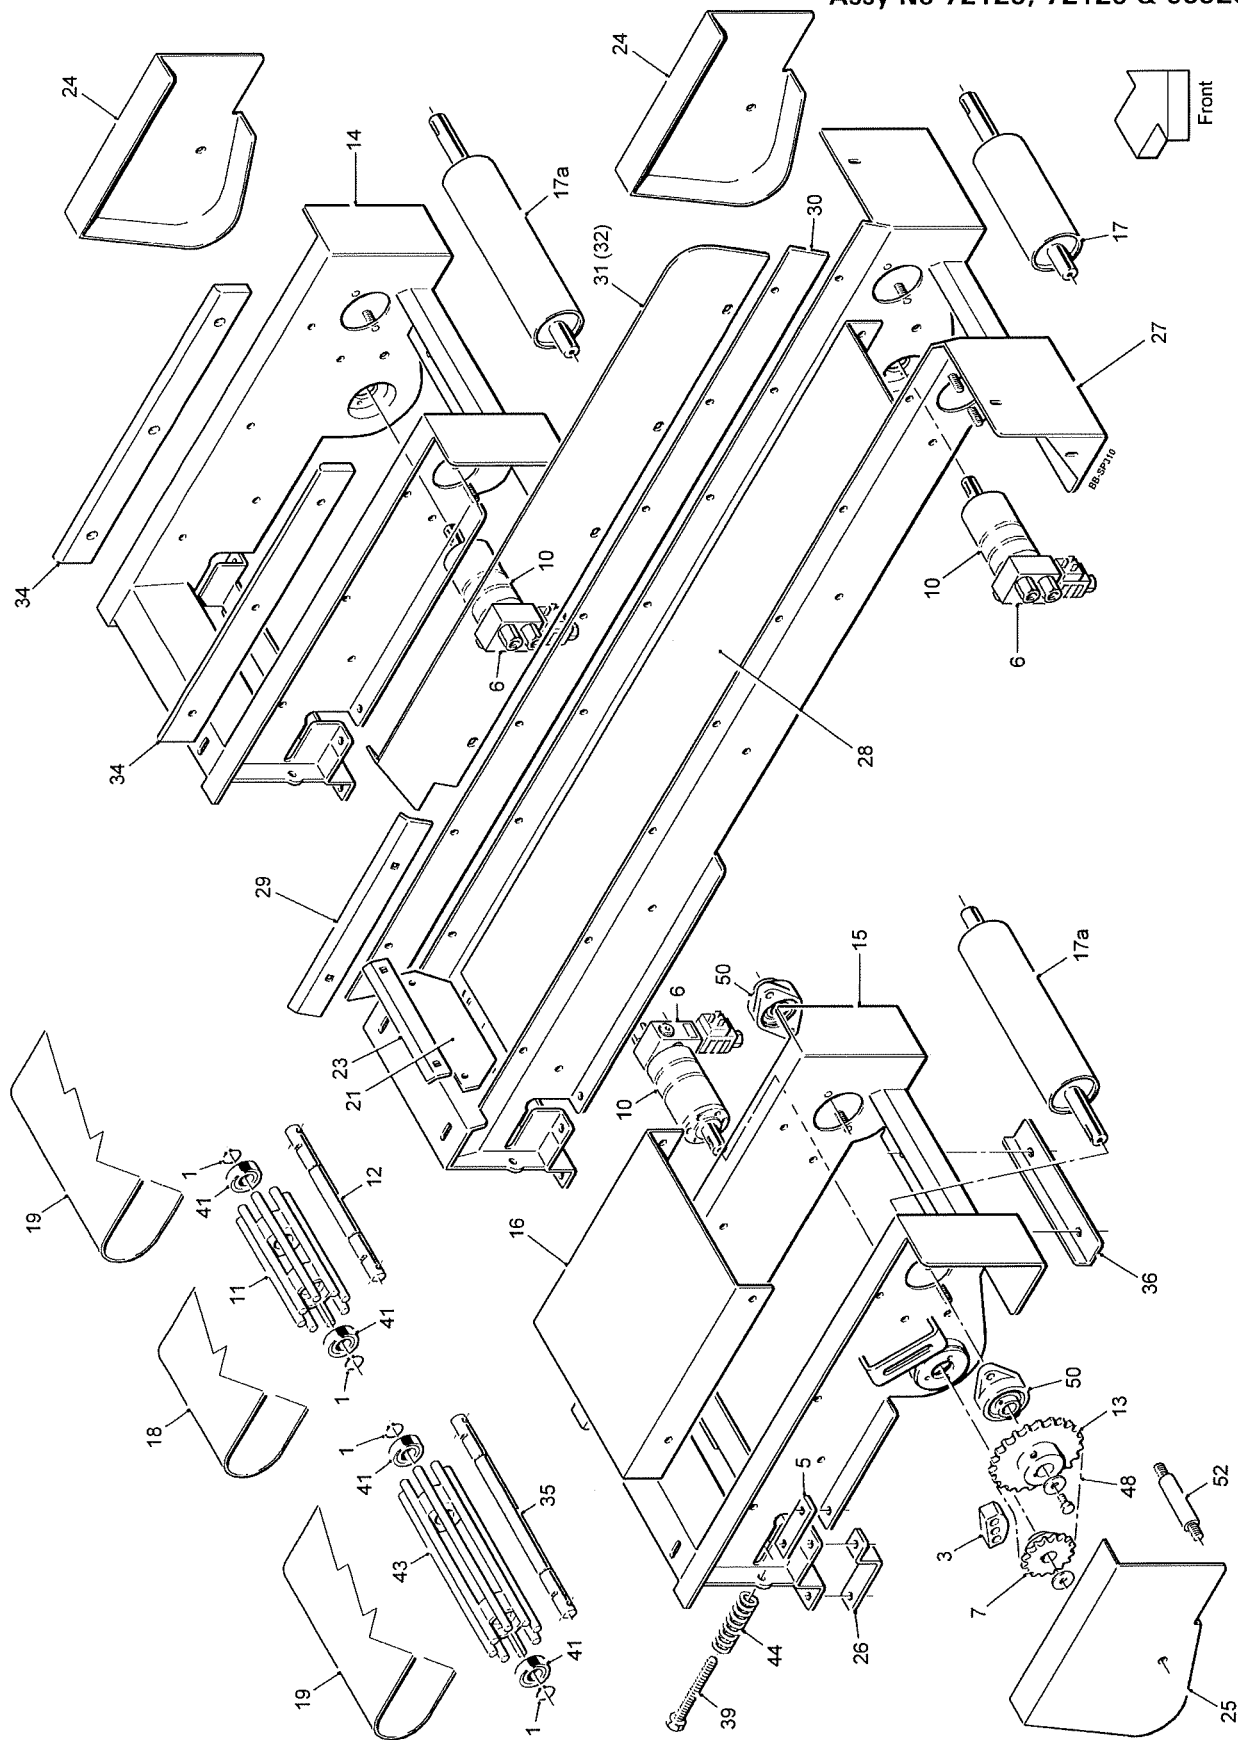

2.6a

SR SERIES PLANTER SPARE PARTS

Serial No. SR3120

Conveyor Assemblies


Assy No 72125, 72126 & 65926

Item	Part No.	Description	Qty.	Remarks
1	12298	Ø20 External Circlip	6	(not shown)
2				
3	17155	Nylon Web Tensioner	3	
4				
5	54013	Joining Strip	6	
6	54266	Motor Manifold	3	
7	54288	16T 1/2"Pitch Sprocket	3	
8				
9				
10	65002	Hydraulic Motor	3	
11	65253	Cage Roller (centre)	1	
12	65254	Cage Roller Shaft (centre)	1	
13	65276	34T 1/2"Pitch Sprocket	3	
14	72127	Conveyor Frame LH	1	
15	72128	Conveyor Frame RH	1	
16	72130	Belt Support Plate (outer)	2	
17	65565	Drive Roller (centre)	1	
17a	65565A	Drive Roller (outer)	2	
18	65566A	Conveyor Belt (centre)	1	
19	65566B	Conveyor Belt (outer)	2	
20				
21	65568	Skirt Rubber	1	
22				
23	65570	Clamp Strip	1	
24	65571	Chain Guard LH	2	
25	65572	Chain Guard RH	1	
26	65887	Conveyor Strap	6	
27	65902	Conveyor Frame Centre	1	
28	65979	Belt Support Plate (long)	1	
29	65983	Clamp Strip	2	
30	65984	Skirt Rubber	2	
31	65990L	Conveyor Side Panel LH	1	
32	65590R	Conveyor Side Panel RH	1	
33				
34	72129	Nylon Side Strip	4	
35	72131	Cage Roller Shaft (outer)	2	
36	72132	Clamp Strip	2	
37				
38				
39	22011010/100	M10x100 Setscrew	6	
40				
41	60042RS	Bearing	6	
42				
43	JK63266	Cage Roller (outer)	2	
44	JK63550	Compression Spring	6	
45				
46				
47				
48	PH526/56	1/2"Pitch Drive Chain	3	
49				
50	SFT20	Bearing	6	
51				
52	SP279M	Guard Bolt	3	

Machines from Serial No. SR3127

Conveyor Assemblies

 Assy No 72125, 72126 & 65926

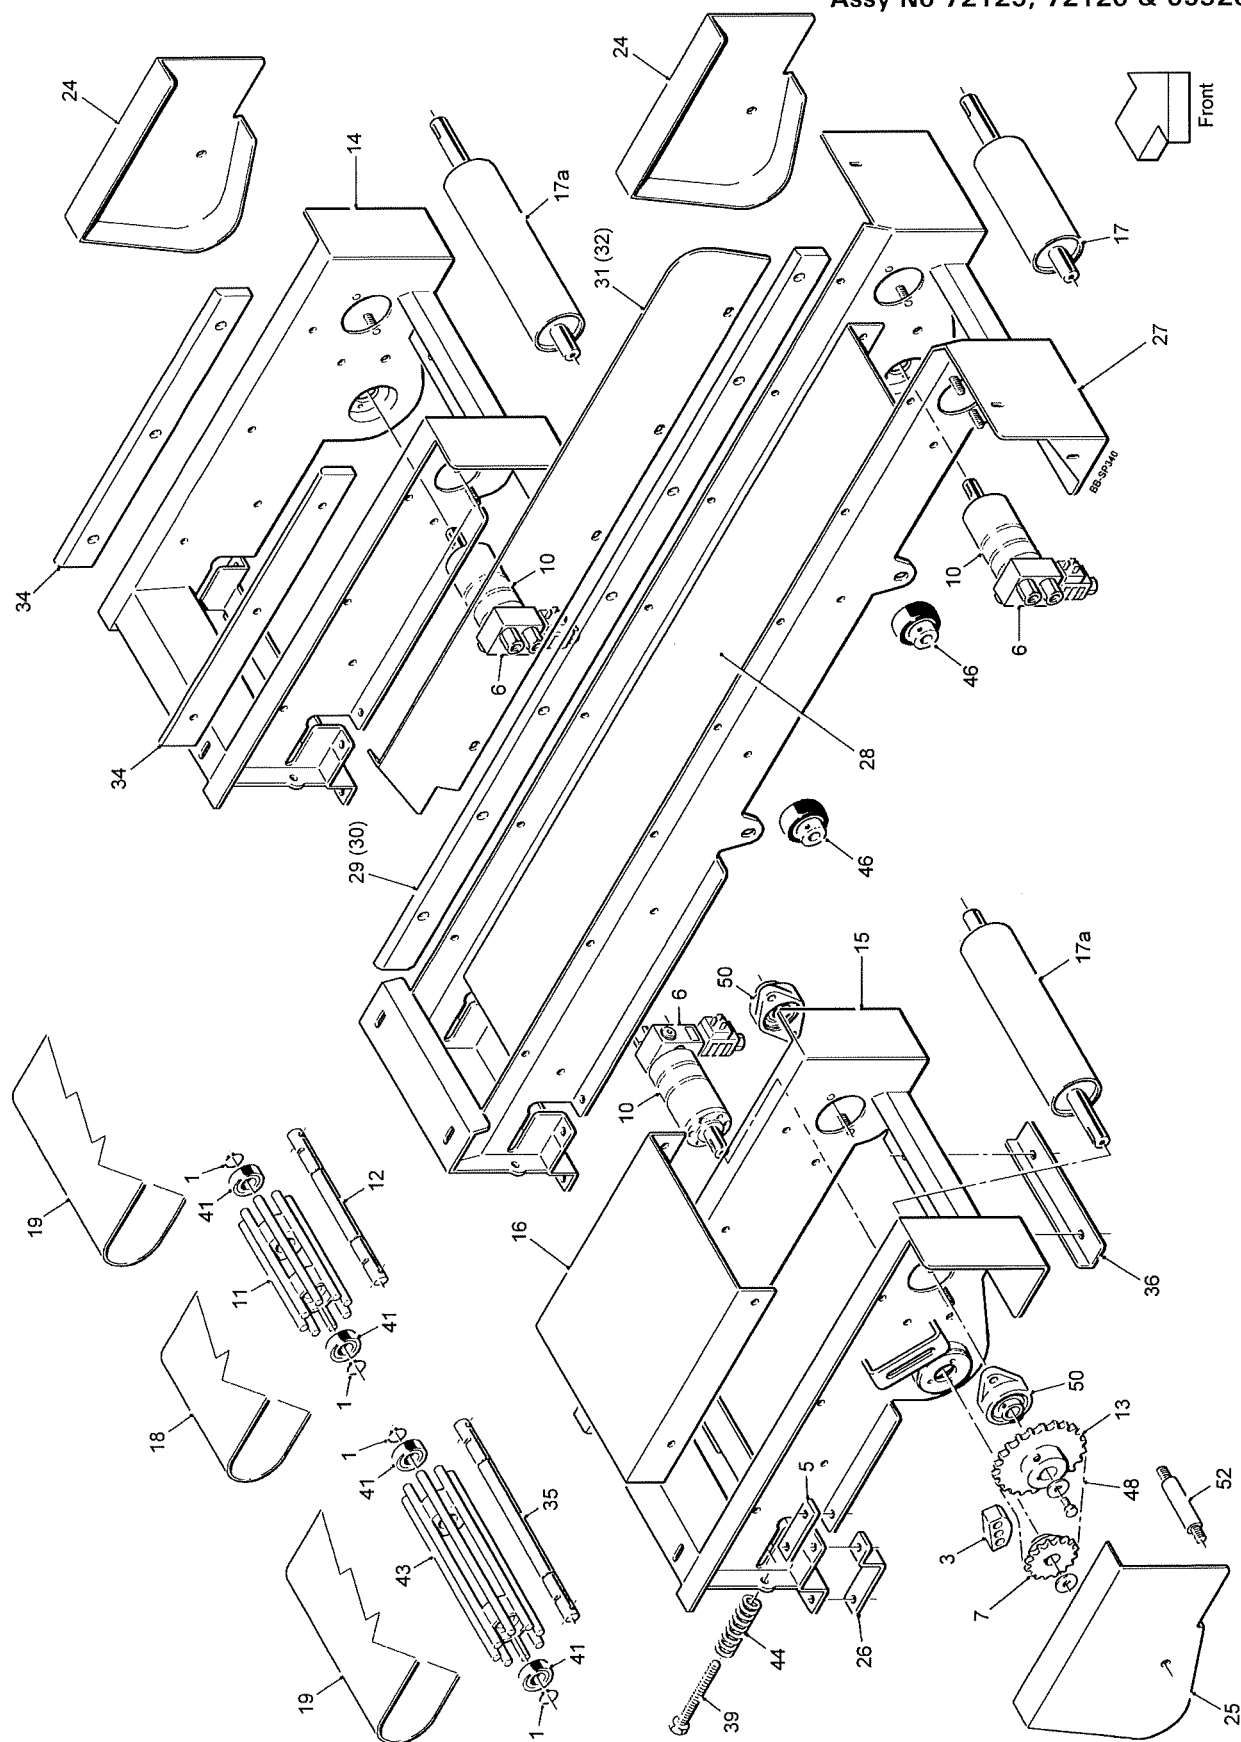

2.6a**SR SERIES PLANTER SPARE PARTS**


Machines from Serial No. SR3127

Conveyor Assemblies**Assy No 72125, 72126 & 65926**

Item	Part No.	Description	Qty.	Remarks
1	12298	Ø20 External Circlip	6	
2				
3	17155	Nylon Web Tensioner	3	
4				
5	54013	Joining Strip	6	
6	54266	Motor Manifold	3	
7	54288	16T 1/2"Pitch Sprocket	3	
8				
9				
10	65002	Hydraulic Motor	3	
11	65253	Cage Roller (centre)	1	
12	65254	Cage Roller Shaft (centre)	1	
13	65276	34T 1/2"Pitch Sprocket	3	
14	72127	Conveyor Frame LH	1	
15	72128	Conveyor Frame RH	1	
16	72130	Belt Support Plate (outer)	2	
17	65565	Drive Roller (centre)	1	
17a	65565A	Drive Roller (outer)	2	
18	65566A	Conveyor Belt (centre)	1	
19	65566B	Conveyor Belt (outer)	2	
20				
21				
22				
23				
24	65571	Chain Guard LH	2	
25	65572	Chain Guard RH	1	
26	65887	Conveyor Strap	6	
27	65902	Conveyor Frame Centre	1	
28	65979	Belt Support Plate (long)	1	
29	72243	Nylon Side Strip LH	1	
30	72244	Nylon Side Strip RH	1	
31	65990L	Conveyor Side Panel LH	1	
32	65590R	Conveyor Side Panel RH	1	(not shown)
33				
34	72129	Nylon Side Strip	4	
35	72131	Cage Roller Shaft (outer)	2	
36	72132	Clamp Strip	2	
37				
38				
39	22011010/100	M10x100 Setscrew	6	
40				
41	60042RS	Bearing	6	
42				
43	JK63266	Cage Roller (outer)	2	
44	JK63550	Compression Spring	6	
45				
46	43038	Roller Assembly	4	
47				
48	PH526/56	1/2"Pitch Drive Chain	3	
49				
50	SFT20	Bearing	6	
51				
52	SP279M	Guard Bolt	3	

Serial No. SR3120

 Tunnel Assemblies

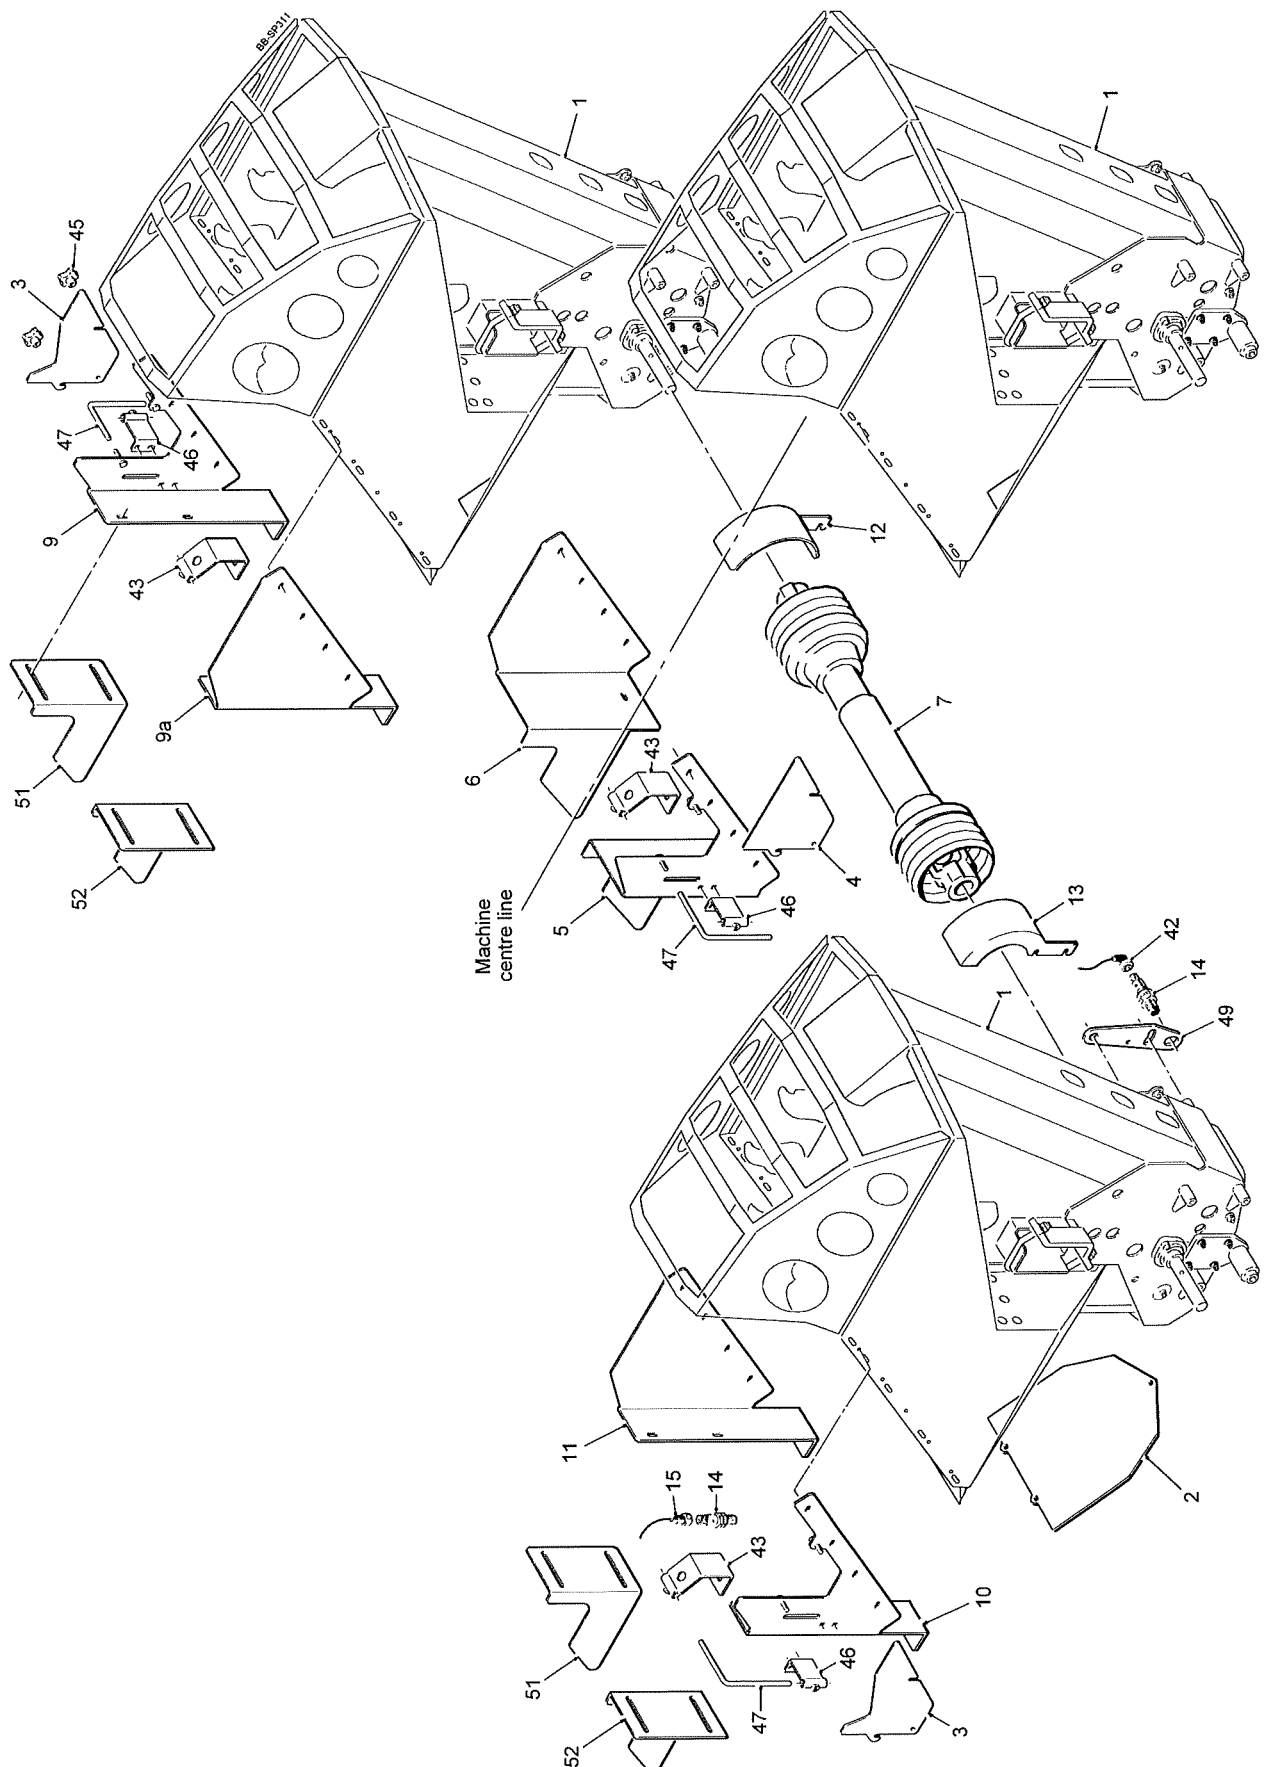


2.7a

SR SERIES PLANTER SPARE PARTS

Serial No. SR3120

 Tunnel Assemblies

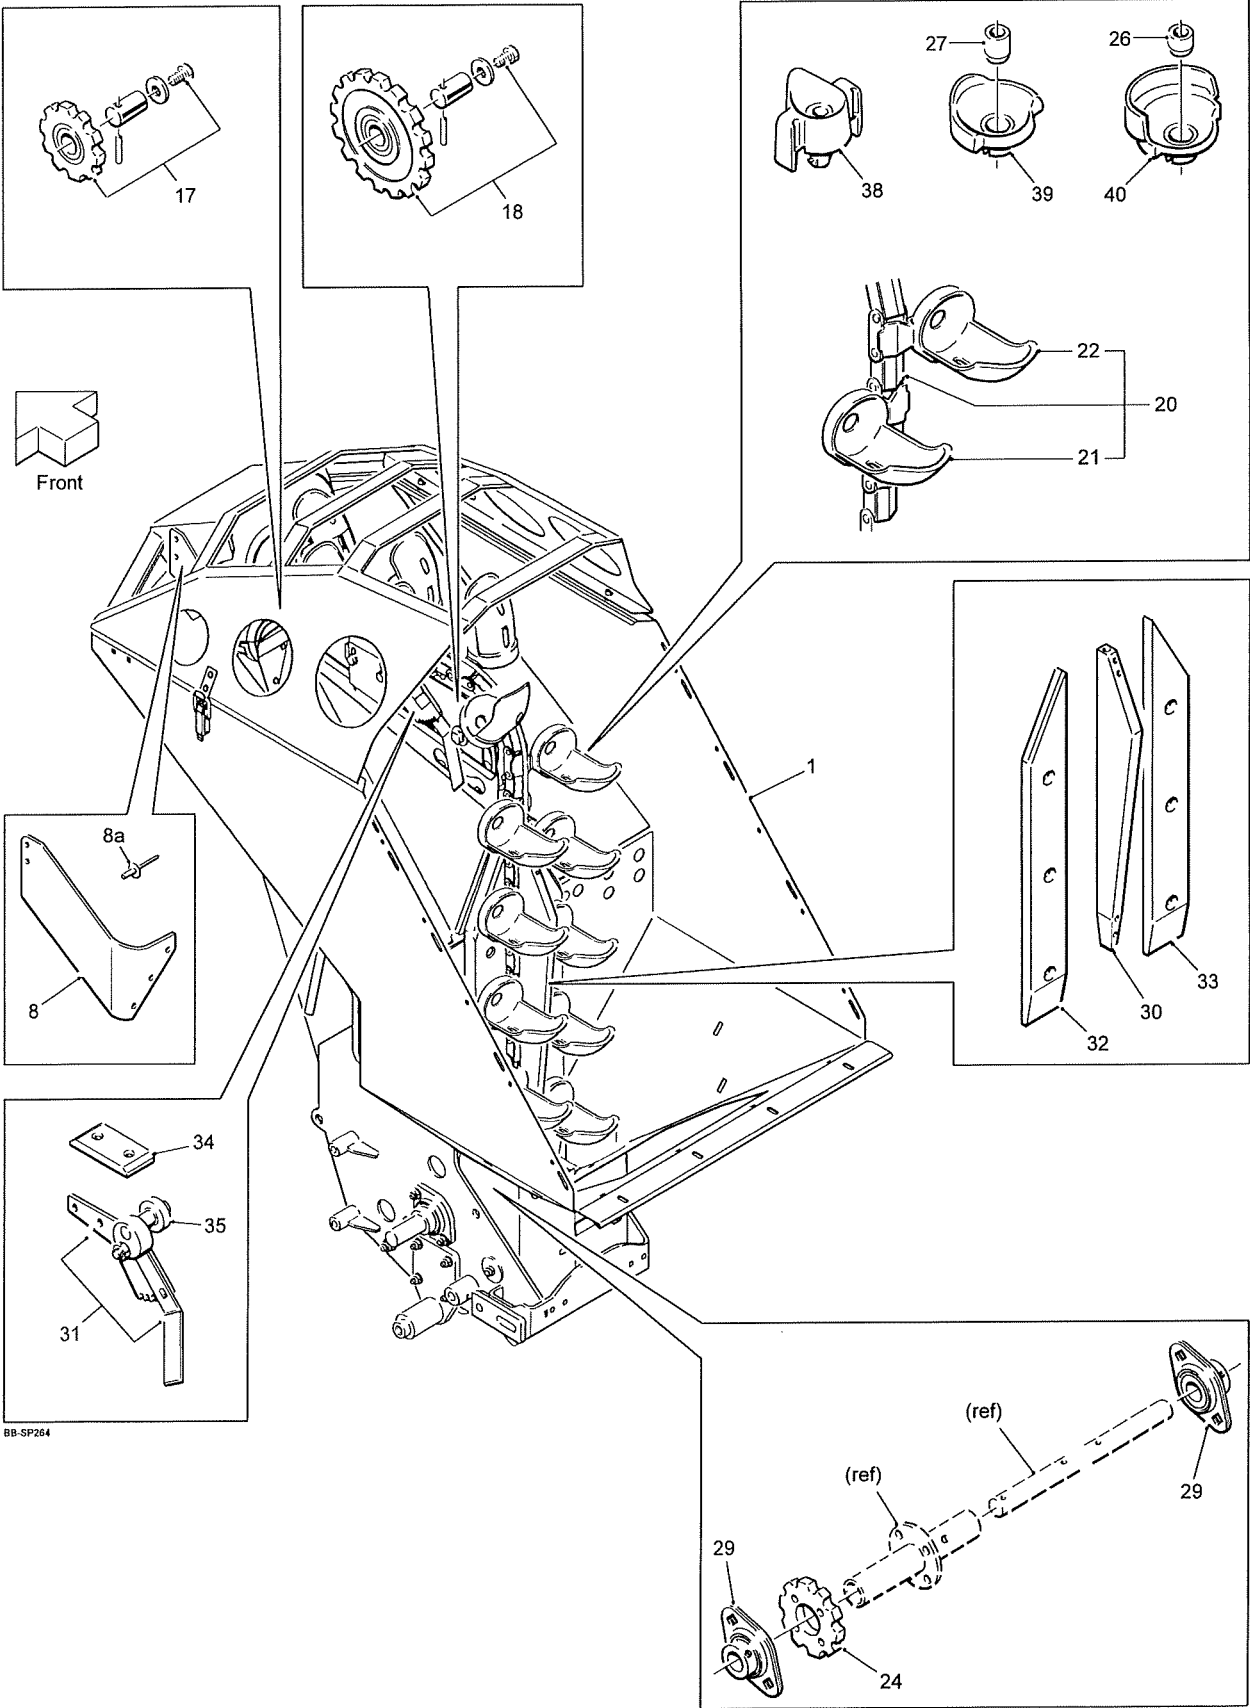

SR SERIES PLANTER SPARE PARTS

2.7b


Serial No. SR3120

Tunnel Assemblies

Item	Part No.	Description	Qty.	Remarks
1	65534	Planting Tunnel Complete	3	
2	72245	Cover Plate	3	
3	65783	Access Panel Outer	2	
4	65783A	Access Panel Centre	1	
5	65785A	Infill Panel Centre RH	1	
6	65787B	Infill Panel Centre LH	1	
7	65696	Drive Coupling Assembly	1	
8	65682	Rubber Deflector	6	
8a	RPF240.948167	Pop Rivet (large flange)	30	
9	72114	Infill Panel LH Outer	1	
9a	72115	Infill Panel LH Inner	1	
10	72116	Infill Panel RH Outer	1	
11	72117	Infill Panel RH Inner	1	
12	65697	Shaft Guard LH	1	
13	65698	Shaft Guard RH	1	
14	65727	Photo Electric Sensor	6	
15	JK63720/2	Sensor Cable Straight (5m)	3	
16				
17	RFB9941350	9T Sprocket Complete (top)	1	
18	RFB9941351	15T Sprocket Complete	1	
19				
20	RFB9941354	Cups & Chain Complete	1	
21	RFB9941355	Cup (left)	a/r	
22	RFB9941356	Cup (right)	a/r	
23				
24	RFB9941360	9T Sprocket (bottom)	1	
25				
26	RFB629942148	Set of 30 Locking Plugs Short	2	RFB629941749 plug x1
27	RFB629942149	Set of 30 Locking Plugs Long	2	RFB629941794 plug x1
28				
29	RFB9941914	Flange Bearing Complete	2	
30	RFB9941923	Nylon Middle Rail	1	
31	RFB9941999	Agitator Complete	1	
32	-	Nylon Guide LH	1	
33	-	Nylon Guide RH	1	
34	-	Nylon Plate	1	
35	RFB9941999/1	Nylon Agitator Roller Only	1	
36				
37				
38	RFB629941680	Set of 30 Plastic Insert Cups (blue)	3	For seed up to 35mm
39	RFB629941681	Set of 30 Plastic Insert Cups (red)	3	For seed 35mm to 55mm
40	RFB629941359	Set of 30 Plastic Insert Cups (grey)	3	For seed above 55mm
41				
42	32037/2	Sensor Cable 90° (5m)	3	
43	43098	Mounting Bracket	3	
44				
45	65126	Knob	8	
46	65781	Carrier Bracket	3	
47	43097	Support Bar	3	
48				
49	65891	Sensor Mounting Plate	3	
50				
51	72133	Infill Panel		
52	72134	Infill Panel	2	
			2	

Machines from Serial No. SR3127

 Tunnel Assemblies

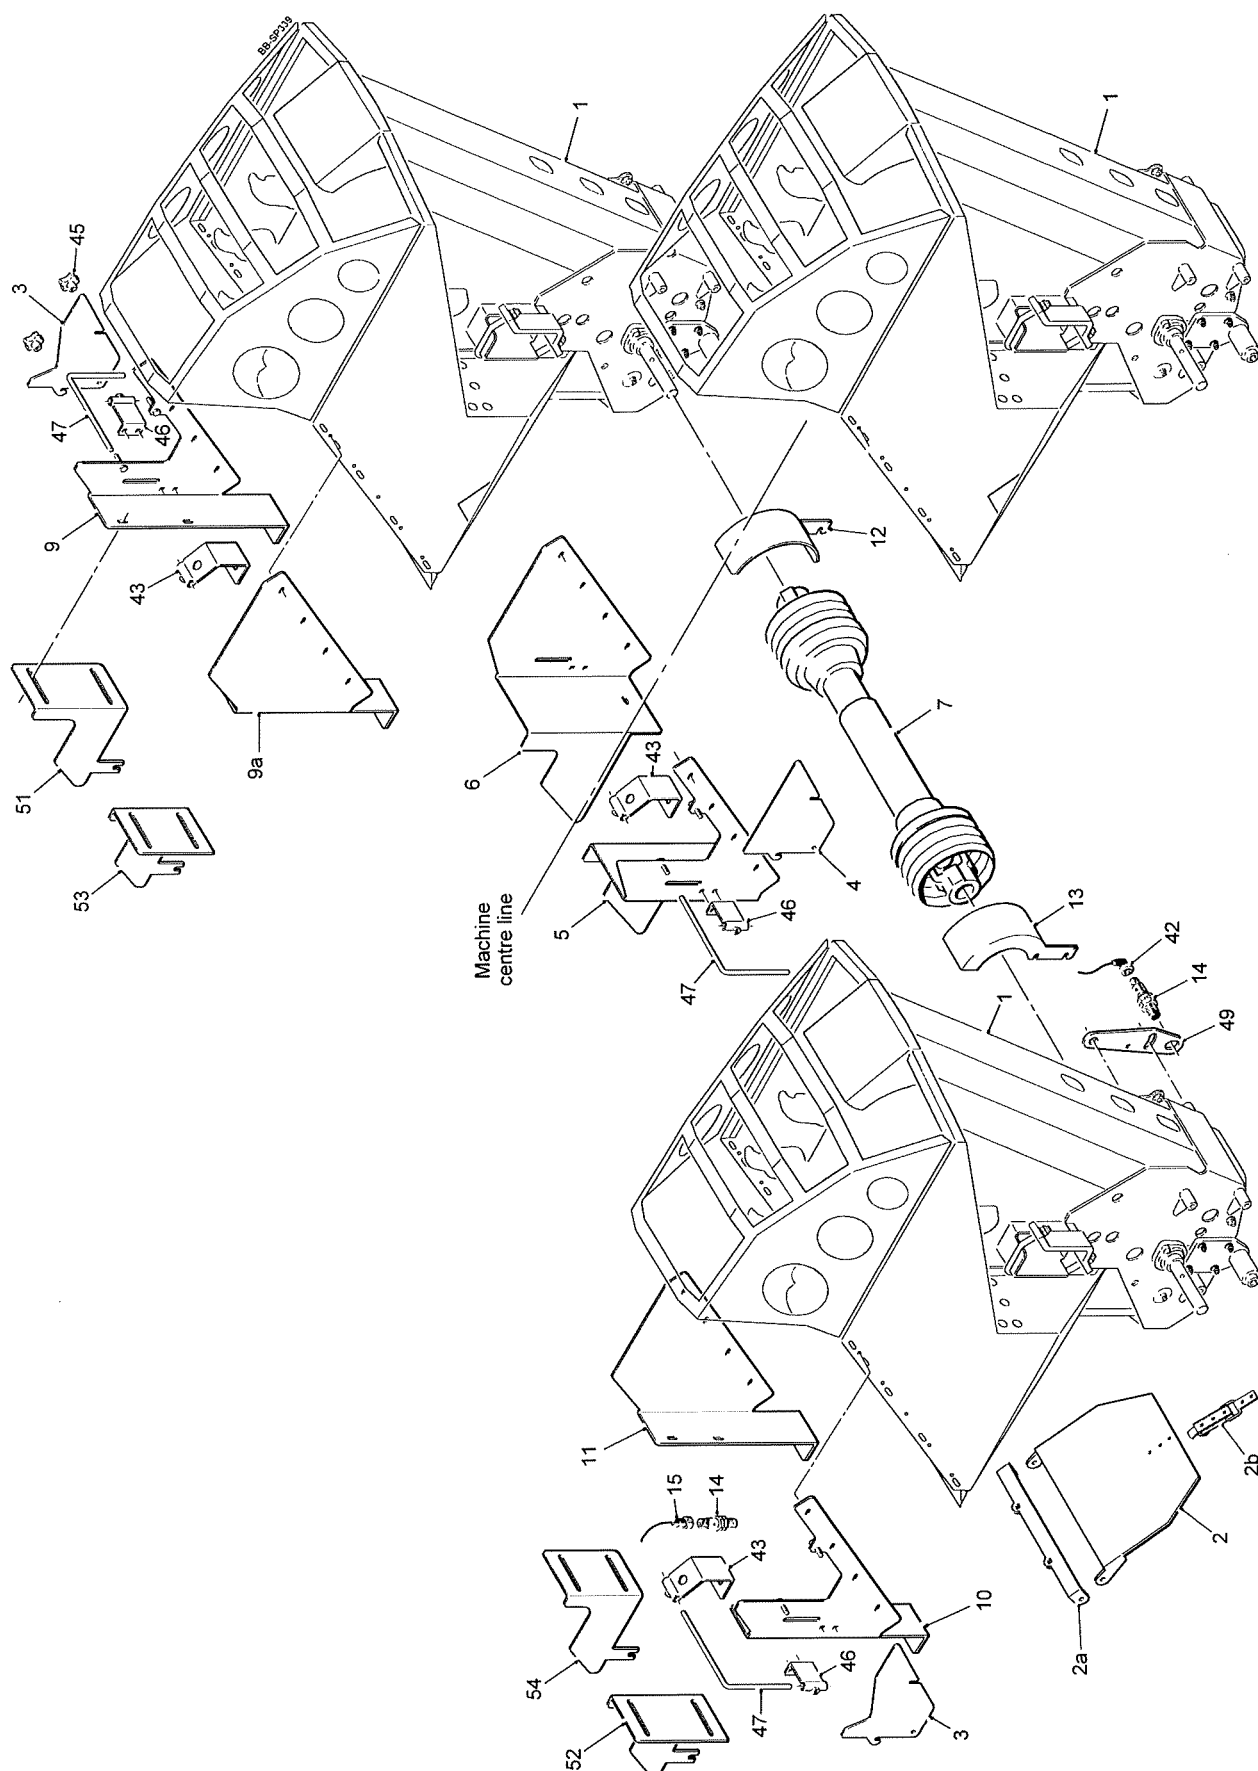


2.7a

SR SERIES PLANTER SPARE PARTS

Machines from Serial No. SR3127

 Tunnel Assemblies

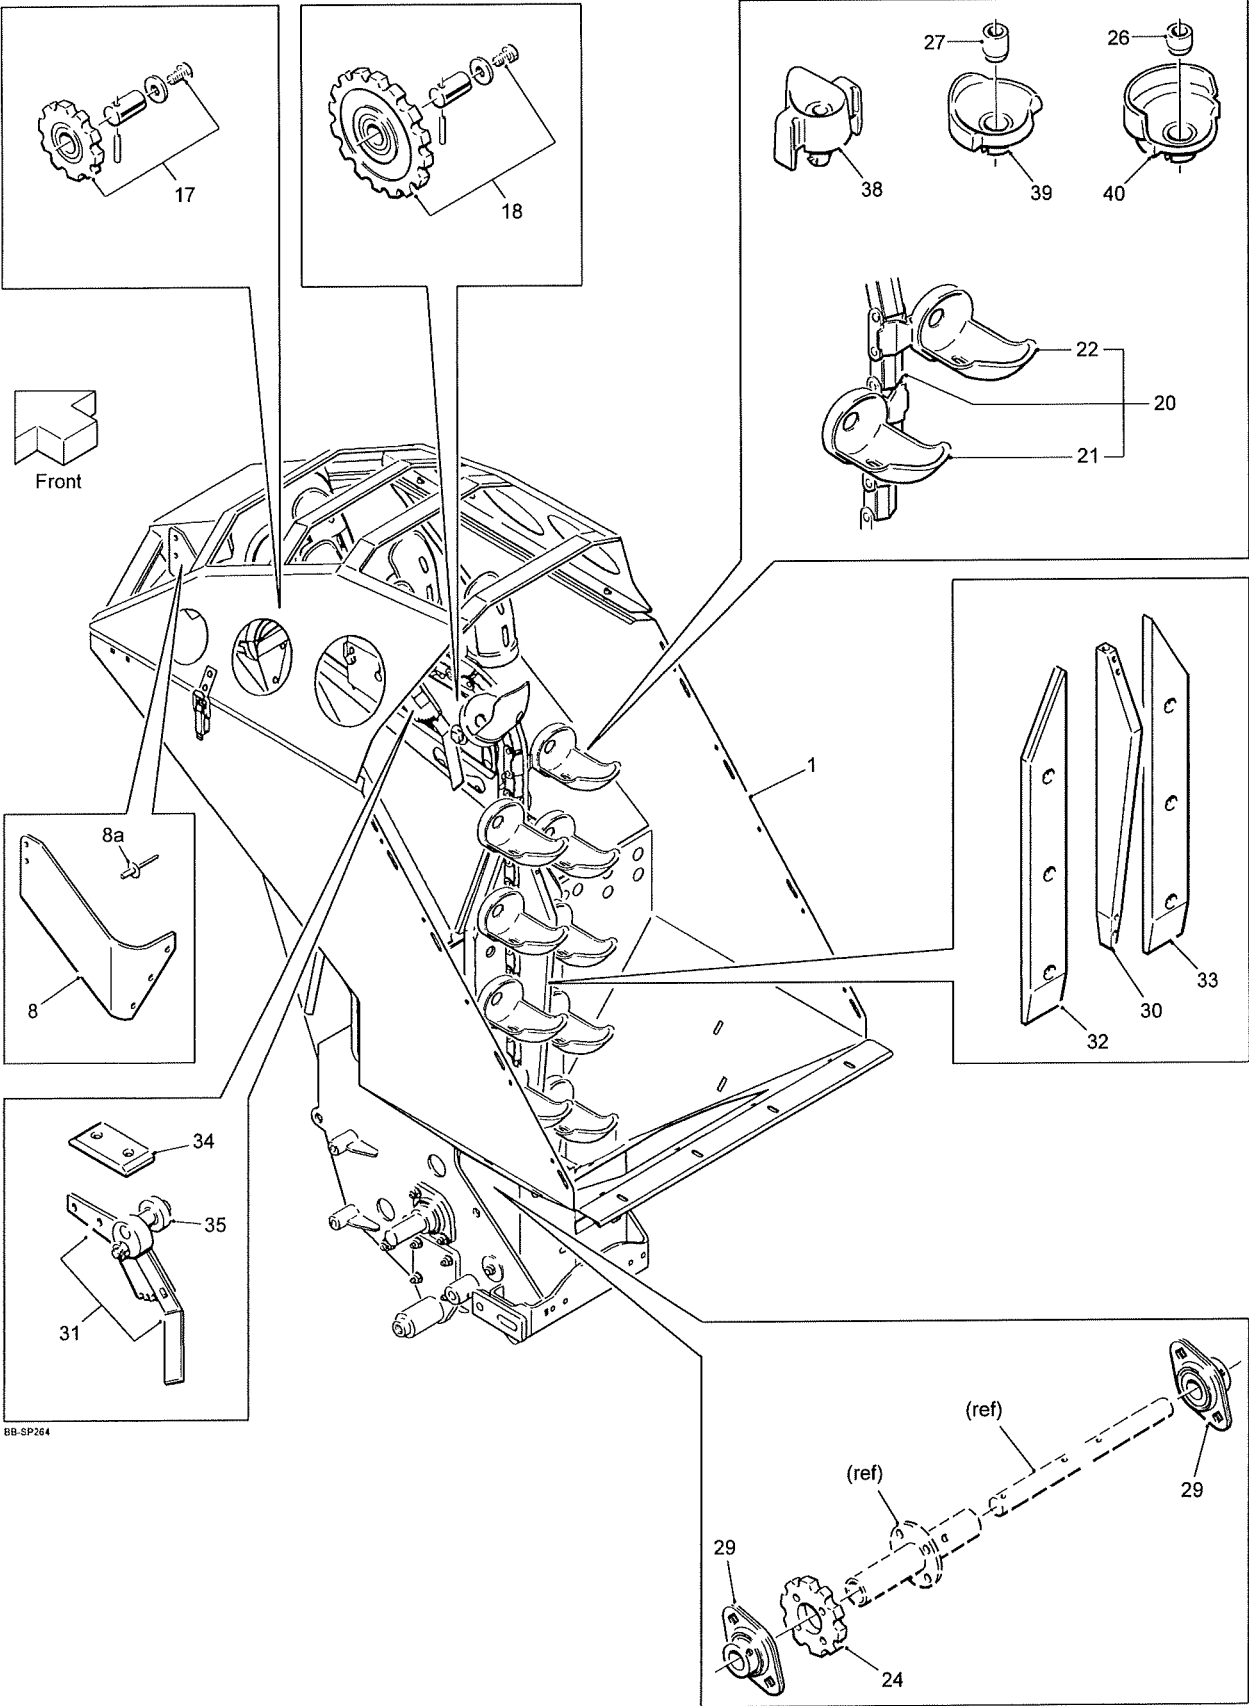

SR SERIES PLANTER SPARE PARTS

2.7b

Machines from Serial No. SR3127

Tunnel Assemblies

Item	Part No.	Description	Qty.	Remarks
1	65534	Planting Tunnel Complete	3	
2	72245	Cover Plate	3	
2a	72246	Hinge Bracket	3	
2b	72247	Toggle Latch	3	
3	65783	Access Panel Outer	2	
4	65783A	Access Panel Centre	1	
5	65785A	Infill Panel Centre RH	1	
6	65787B	Infill Panel Centre LH	1	
7	65696	Drive Coupling Assembly	1	
8	65682	Rubber Deflector	6	
8a	RPF240.948167	Pop Rivet (large flange)	30	
9	72114	Infill Panel LH Outer	1	
9a	72232	Infill Panel LH Inner	1	
10	72116	Infill Panel RH Outer	1	
11	72233	Infill Panel RH Inner	1	
12	65697	Shaft Guard LH	1	
13	65698	Shaft Guard RH	1	
14	65727	Photo Electric Sensor	6	
15	JK63720/2	Sensor Cable Straight (5m)	3	
16				
17	RFB9941350	9T Sprocket Complete (top)	1	
18	RFB9941351	15T Sprocket Complete	1	
19				
20	RFB9941354	Cups & Chain Complete	1	
21	RFB9941355	Cup (left)	a/r	
22	RFB9941356	Cup (right)	a/r	
23				
24	RFB9941360	9T Sprocket (bottom)	1	
25				
26	RFB629942148	Set of 30 Locking Plugs Short	2	RFB629941749 plug x1
27	RFB629942149	Set of 30 Locking Plugs Long	2	RFB629941794 plug x1
28				
29	RFB9941914	Flange Bearing Complete	2	
30	RFB9941923	Nylon Middle Rail	1	
31	RFB9941999	Agitator Complete	1	
32	-	Nylon Guide LH	1	
33	-	Nylon Guide RH	1	
34	-	Nylon Plate	1	
35	RFB9941999/1	Nylon Agitator Roller Only	1	
36				
37				
38	RFB629941680	Set of 30 Plastic Insert Cups (blue)	3	For seed up to 35mm
39	RFB629941681	Set of 30 Plastic Insert Cups (red)	3	For seed 35mm to 55mm
40	RFB629941359	Set of 30 Plastic Insert Cups (grey)	3	For seed above 55mm
41				
42	32037/2	Sensor Cable 90° (5m)	3	
43	43098	Mounting Bracket	3	
44				
45	65126	Knob	8	
46	65781	Carrier Bracket	3	
47	54075	Support Bar	3	
48				

2.7c SR SERIES PLANTER SPARE PARTS

2.7c SR SERIES PLANTER SPARE PARTS


Machines from Serial No. SR3127

Tunnel Assemblies

Item	Part No.	Description	Qty.	Remarks
49 50	65891	Sensor Mounting Plate	3	
51	72234	Infill Panel	1	
52	72235	Infill Panel	1	
53	72236	Infill Panel	1	
54	72237	Infill Panel	1	

3-Row Opener Assemblies

 Assy No 65980

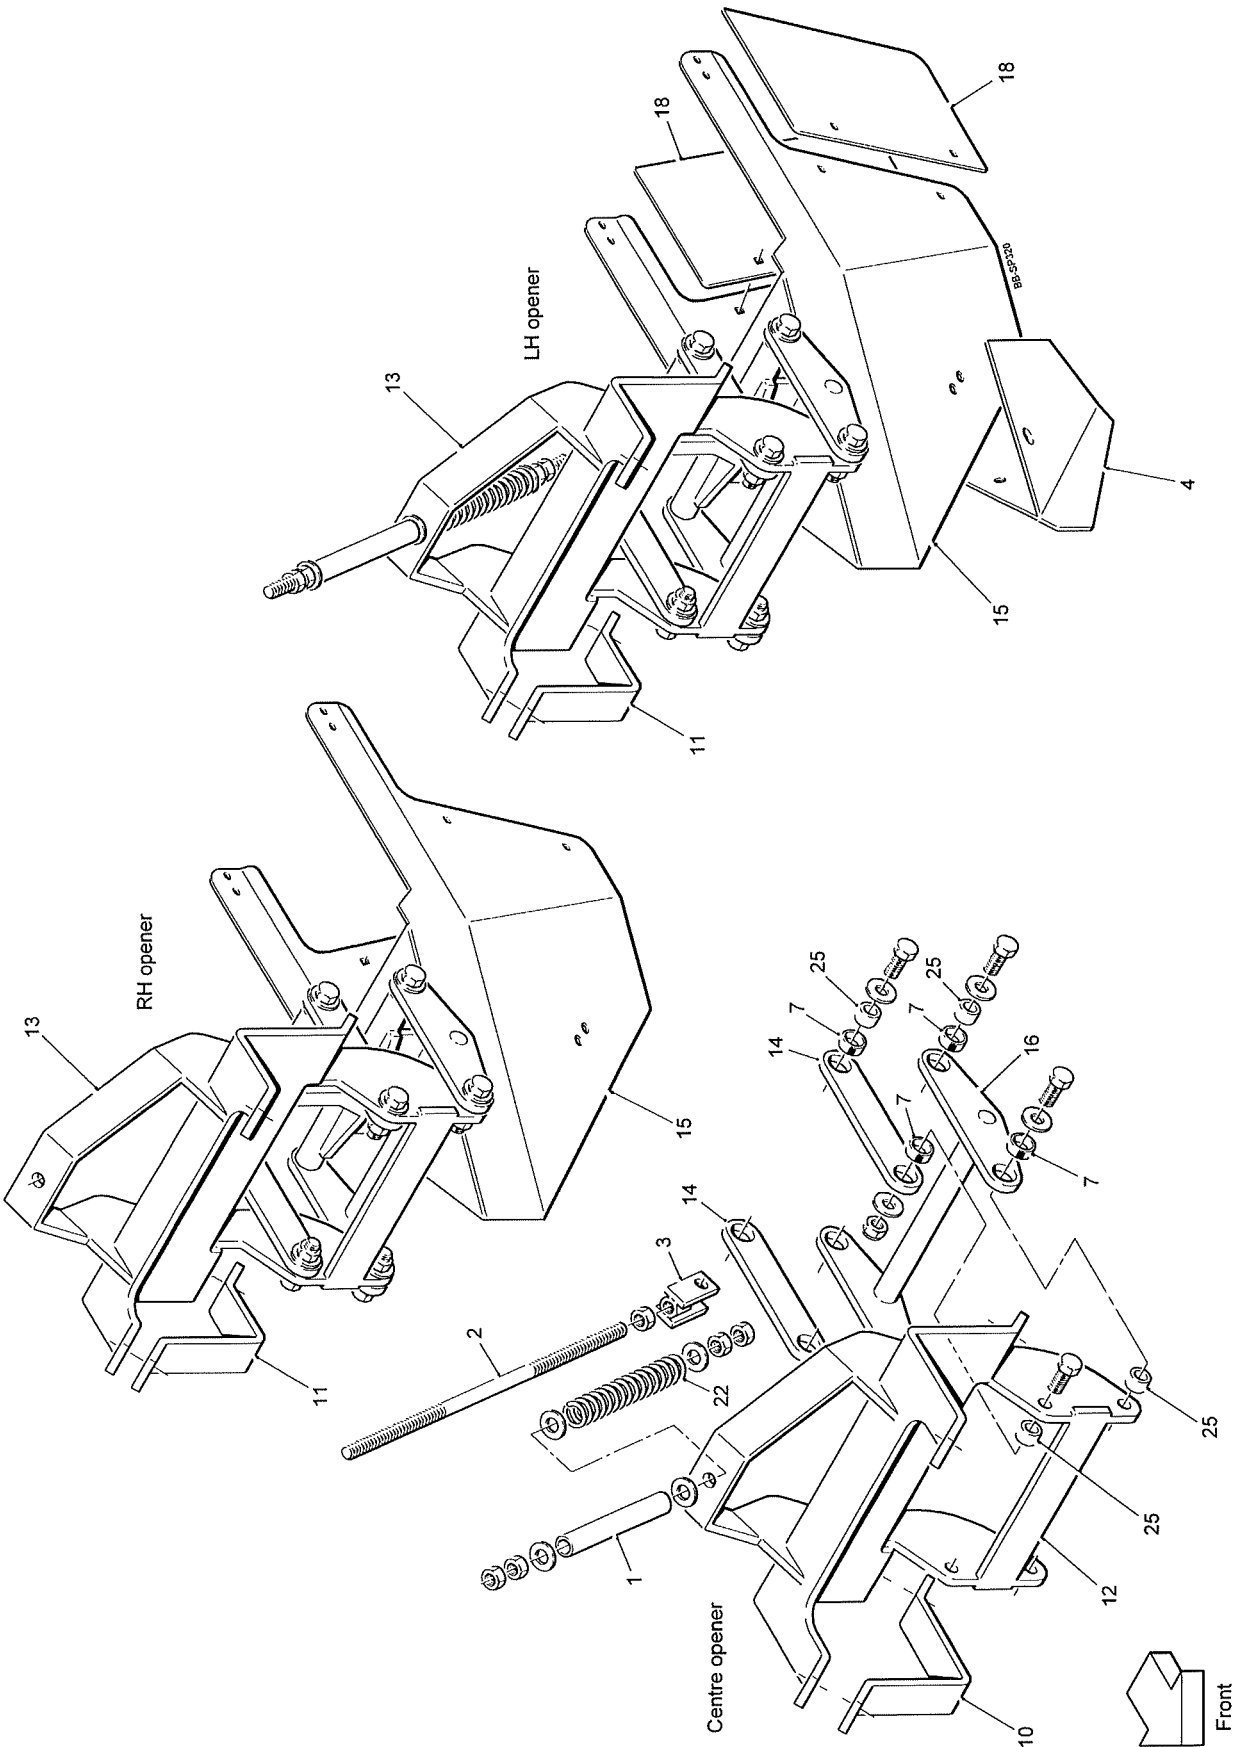

2.8a


SR SERIES PLANTER SPARE PARTS

3-Row Opener Assemblies

Assy No 65980

Item	Part No.	Description	Qty.	Remarks
1	43286	Spacer Tube	3	
2	43519	Depth Rod	3	
3	43520	Clevis	3	
4	43729	Wear Point (stainless steel	3	
5				
6				
7	54114	Bush	24	
8				
9				
10	65031	Centre Opener Clamp Plate	2	
11	65031A	Outer Opener Clamp Plate	4	
12	65556	Centre Opener Mounting Bracket	1	
13	65556A	Outer Opener Mounting Bracket	2	
14	65557	Link Plate	6	
15	65558	Opener (stainless steel)	3	
16	65595	Lower Link	3	
17				
18	65769B	150mm Extension Plate	6	
19				
20				
21				
22	PS165	Compression Spring	3	
23				
24				
25	SS025017/017	Steel Spacer	24	

 Soil Retention Panels
Assy No 65938

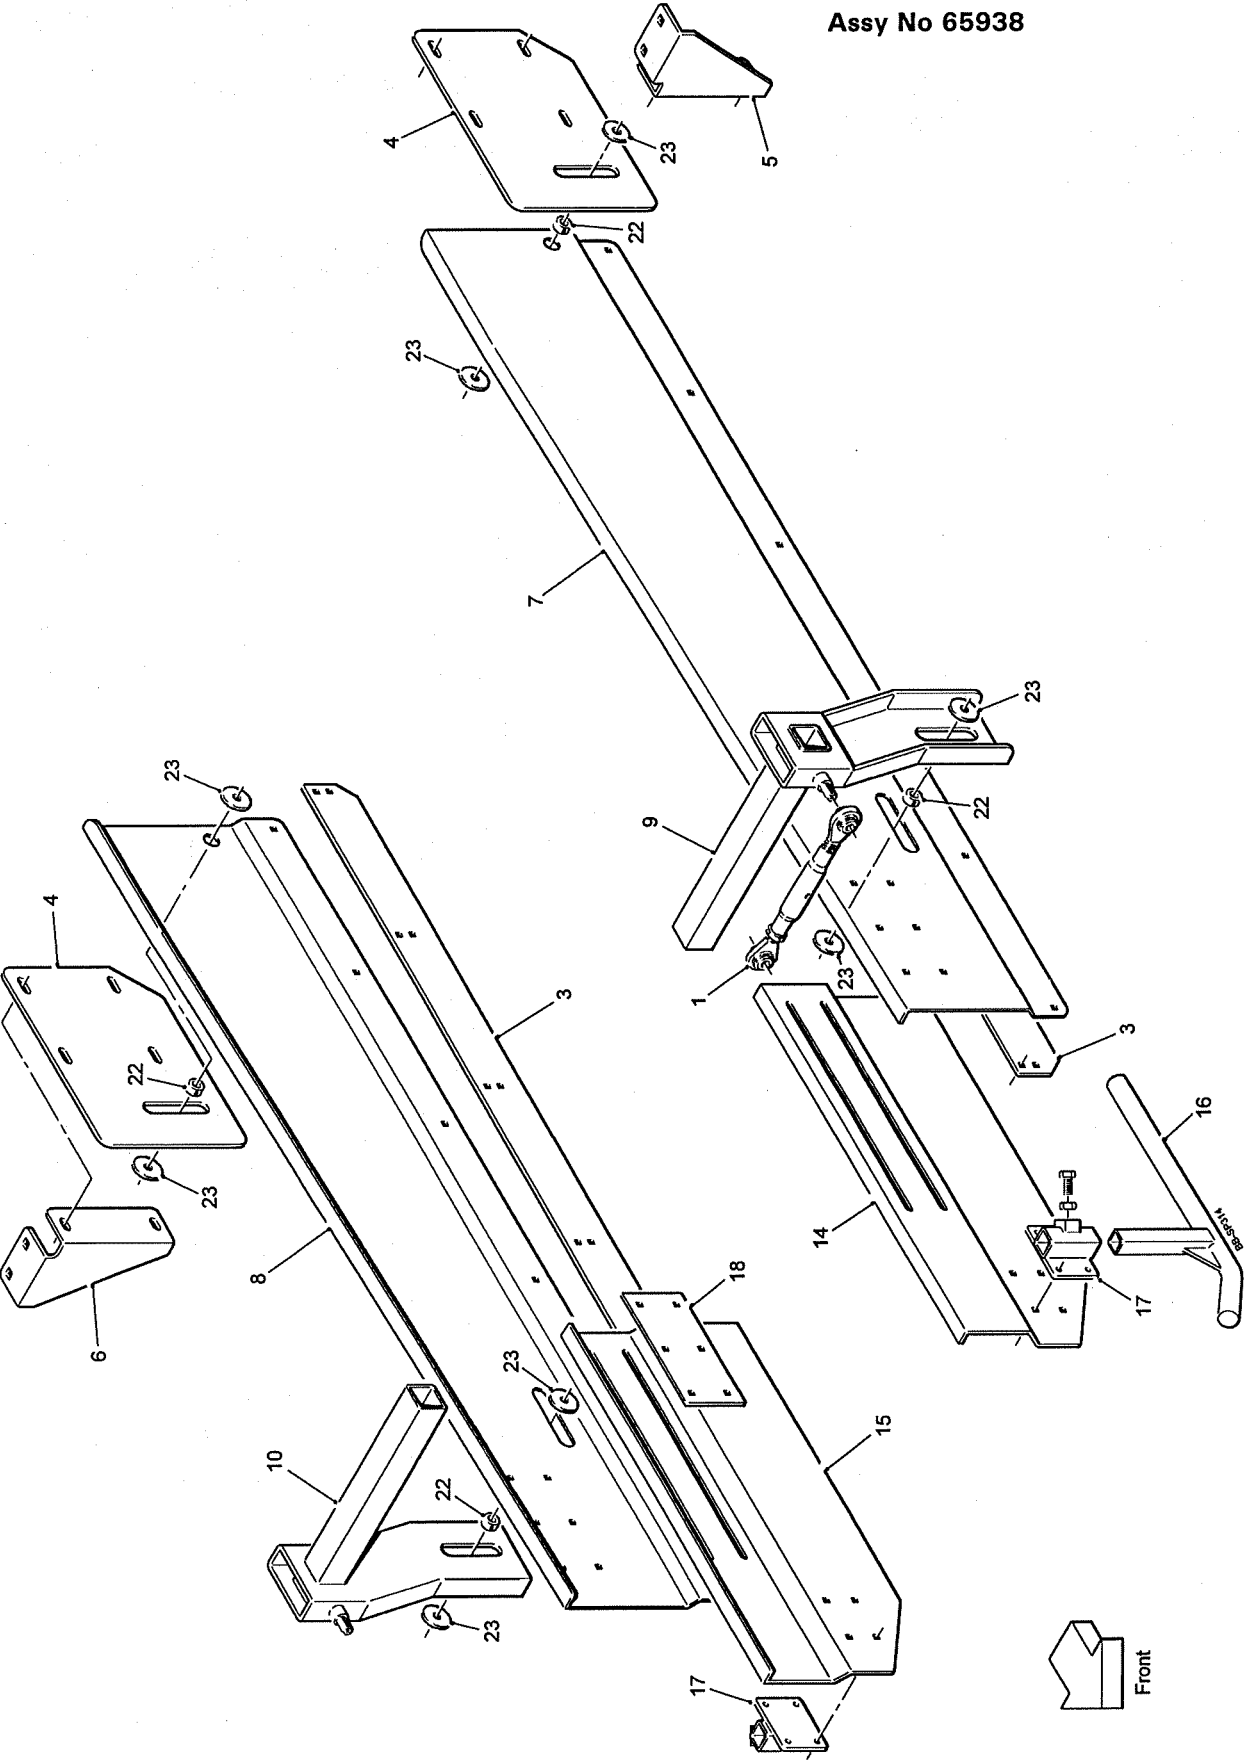

2.10a

SR SERIES PLANTER SPARE PARTS


Soil Retention Panels

Assy No 65938

Item	Part No.	Description	Qty.	Remarks
1	54327	Top Link Assembly	2	
2				
3	65624A	Wear Strip	2	
4	65649	Side Plate	2	
5	65651	Support Plate LH	1	
6	65652	Support Plate RH	1	
7	65723A	Soil Retention Panel LH	1	
8	65724A	Soil Retention Panel RH	1	
9	65725	Panel Mounting LH	1	
10	65726	Panel Mounting RH	1	
11				
12				
13				
14	72028	Panel Extension LH	1	
15	72029	Panel Extension RH	1	
16	72030	Skid	2	
17	72031	Skid Clamp	2	
18	72032	Clamp Plate	2	
19				
20				
21				
22	SS030017/015	Steel Spacer	4	
23	SS060017/005	Steel Spacer	8	

Parallel Linkage Tool Bar

 Assy No 65963

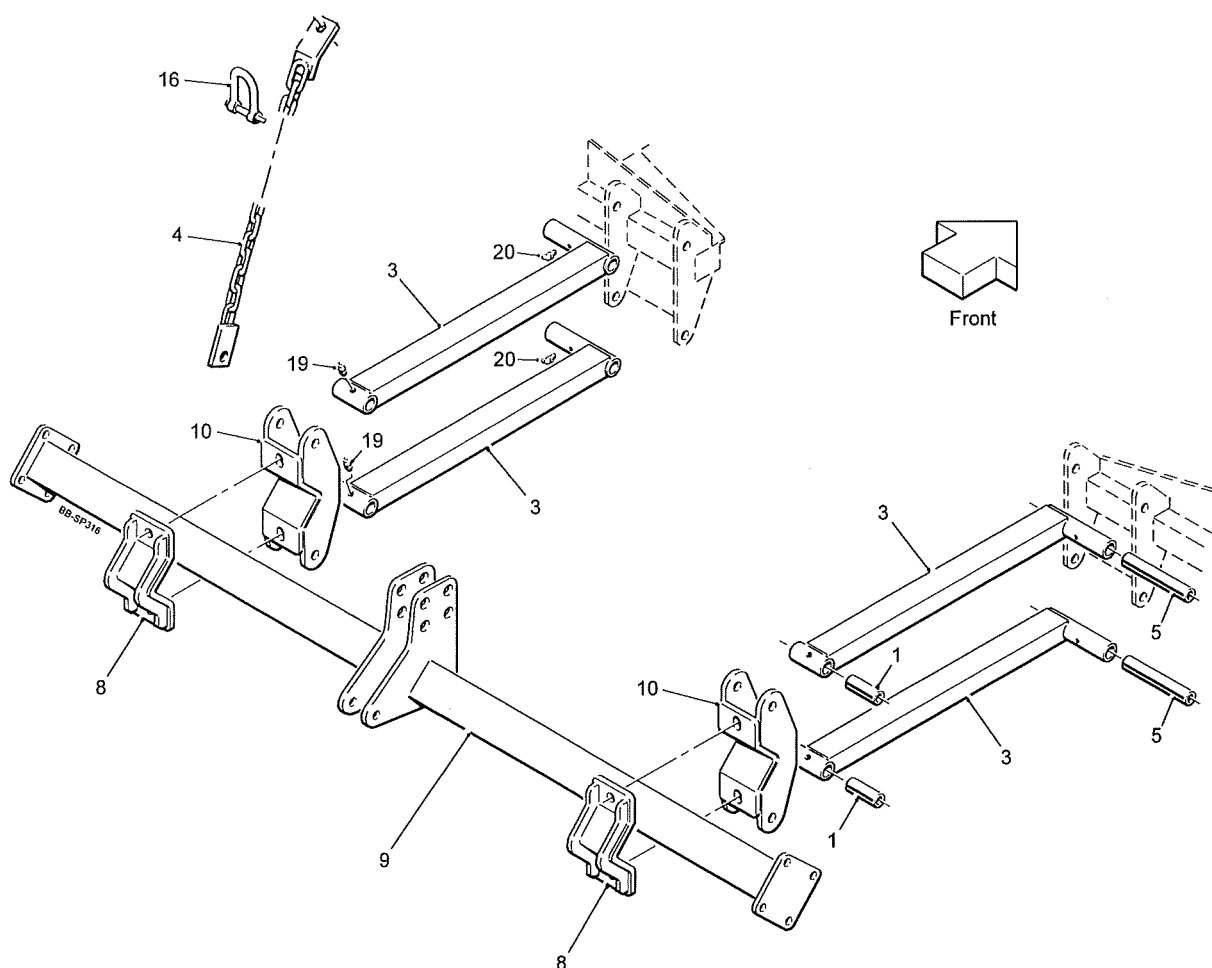

2.12a

SR SERIES PLANTER SPARE PARTS

Parallel Linkage Tool Bar

Assy No 65963

Item	Part No.	Description	Qty.	Remarks
1	52586	Pivot Sleeve (short)	4	Serial No SR3120 was 54307
2				
3	72239	Parallel Linkage Arm	4	
4	54324	Support Chain	2	
5	54328	Pivot Sleeve (long)	1	
6				
7				
8	65552	Clamp	2	
9	65553	Tool Bar	1	
10	65657	Clamp Bracket	2	
11				
12				
13				
14				
15				
16	H171	'D' Shackle	2	
17				
18				
19	RPC648.081250	M8 Grease Nipple Straight	4	
20	RPC648.081252	M8 Grease Nipple 90°	4	

Adjustable Moulding Board


Assy No 65996

Item	Part No.	Description	Qty.	Remarks
1	43650	Pivot Pin	2	
2				
3	54375	Centre Mould Board	2	
4				
5	65064	Side Mounting LH	1	
6	65065	Side Mounting RH	1	
7	65608	Hydraulic Ram	1	
8	65645	Moulding Board LH	1	
9	65646	Moulding Board RH	1	
10	65647	Top Plate Extension	2	
11	65647A	Top Plate Extension	1	
12	65648	Stainless Steel Top Plate	1	
13				
14				
15	65708A	Top Frame	1	
16	65709	Pivot Arm LH	1	
17	65710	Pivot Arm RH	1	
18				
19				
20				
21				
22				
23				
24				
25	KA20533	Top Link Assembly	1	
26				
27	RPC648.081252	M8 Grease Nipple 90°	2	
28				
29	SS040011/005	Steel Spacer	2	
30				
31				
32	22067006/026	Ø6x26 Roll Pin	2	

Serial No. SR3120

Hydraulics (space selector & conveyors)

 Part of Assy No 65932

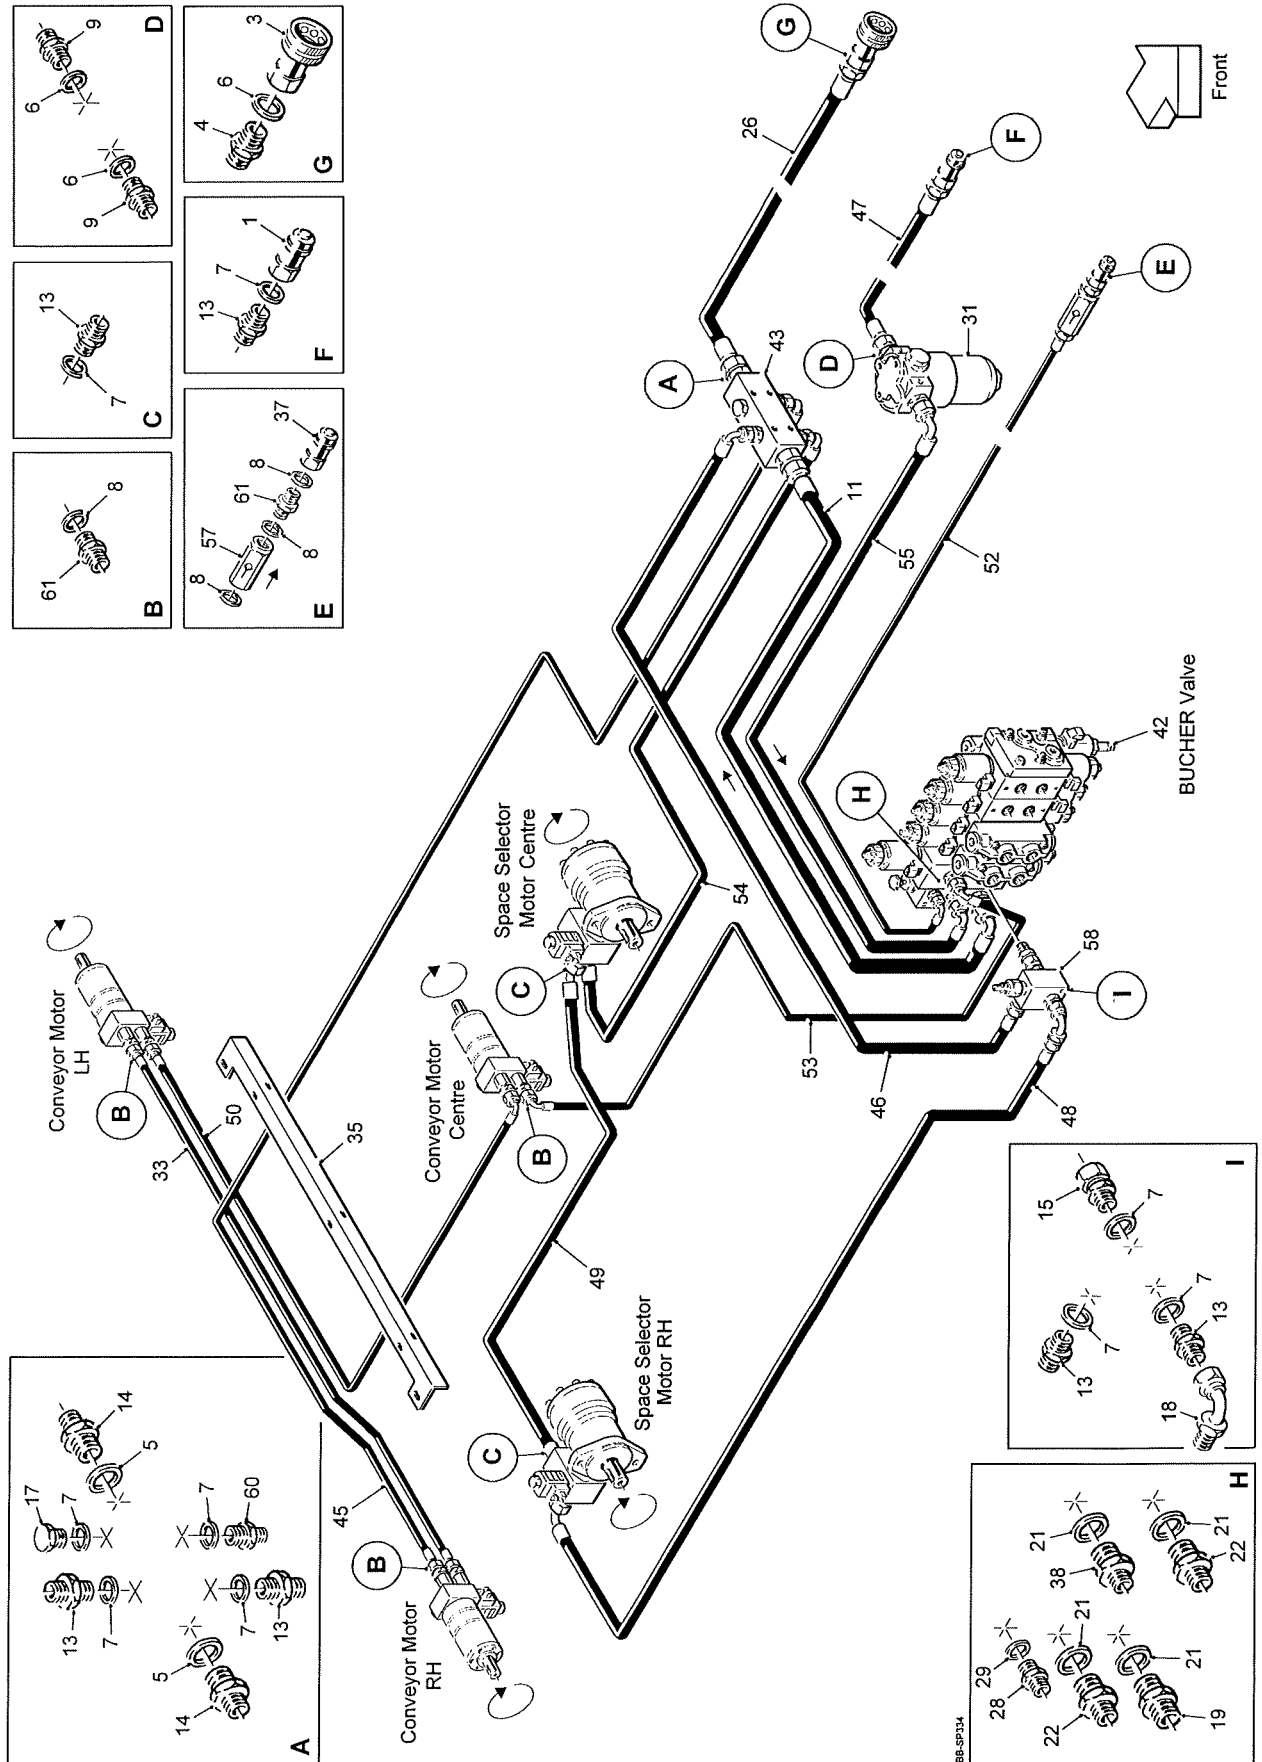

2.17a

SR SERIES PLANTER SPARE PARTS

Serial No. SR3120

Hydraulics (space selector & conveyors)

Part of Assy No 65932

Item	Part No.	Description	Qty.	Remarks
1	10140	1/2"BSP Male Probe	1	
2				
3	11108A	3/4"BSP Female Probe	1	
4	11115	3/4"BSP M M Adaptor	1	
5	11122	1"BSP Dowty Seal	2	
6	11123	3/4"BSP Dowty Seal	3	
7	11124	1/2"BSP Dowty Seal	12	
8	11125	3/8"BSP Dowty Seal	9	
9	11295	3/4"BSPx1/2"BSP M M Adaptor	2	
10	11336	3/8"BSPx1/4"BSP M M Adaptor	1	
11	11744	3/4"Hose Assembly (1400mm)	1	
12				
13	12315	1/2"BSP M M Adaptor	9	
14	12560	1"BSPx3/4"BSP M M Adaptor	2	
15	12602	1/2"BSP M F Swivel Adaptor	1	
16				
17	24383	1/2"BSP Blanking Plug	1	
18	26086	1/2"BSP M F Swept 90°Adaptor	1	
19	27904	M22x3/4"BSP M M Adaptor	1	
20				
21	31167	M22 Dowty Seal	4	
22	31168	M22x1/2"BSP M M Adaptor	2	
23				
24				
25				
26	43254	3/4"Hose Assembly (3100mm)	1	
27				
28	44207	M14x1/4"BSP M M Adaptor	1	
29	44208	M14 Dowty Seal	1	
30				
31	46859	Pressure Filter Complete	1	
32				
33	52122	3/"Hose Assembly (1100mm)	1	
34				
35	72188	Hose Carrier	1	
36				
37	60166	3/8"BSP Male Probe	1	
38	60717	M22x3/8"BSP M M Adaptor	1	
39				
40				
41				
42	65873	Hydraulic Valve Bank (BUCHER)	1	
43	65882A	Return Manifold (6 port)	1	
44				
45	60248	3/8"Hose Assembly (2450mm)	1	
46	60928	1/2"Hose Assembly (1050mm)	1	
47	60603	1/2"Hose Assembly (3200mm)	1	
48	60747	1/2"Hose Assembly (2050mm)	1	
49	60767	1/2"Hose Assembly (1700mm)	1	
50	60894	3/8"Hose Assembly (1250mm)	1	
51				
52	71152	1/4"Hose Assembly (4800mm)	1	
53	71158	3/8"Hose Assembly (1700mm)	1	
54	71160	1/2"Hose Assembly (1800mm)	1	
55	71161	1/2"Hose Assembly (1400mm)	1	

2.17b

Hydraulics (space selector & conveyors)

Item	Part No.	Description	Qty.	Remarks
56				
57	72240	3/8"BSP Inline Check Valve	1	
58	72241	1/2"BSP Pressure Relief Valve	1	
59				
60	UC25	1/2"BSPx3/8"BSP M M Adaptor	1	
61	UC31A	3/8"BSP M M Adaptor	7	

 
SR SERIES PLANTER SPARE PARTS

2.17

Machines from Serial No. SR3127

Hydraulics (space selector & conveyors)

Part of Assy No 65932

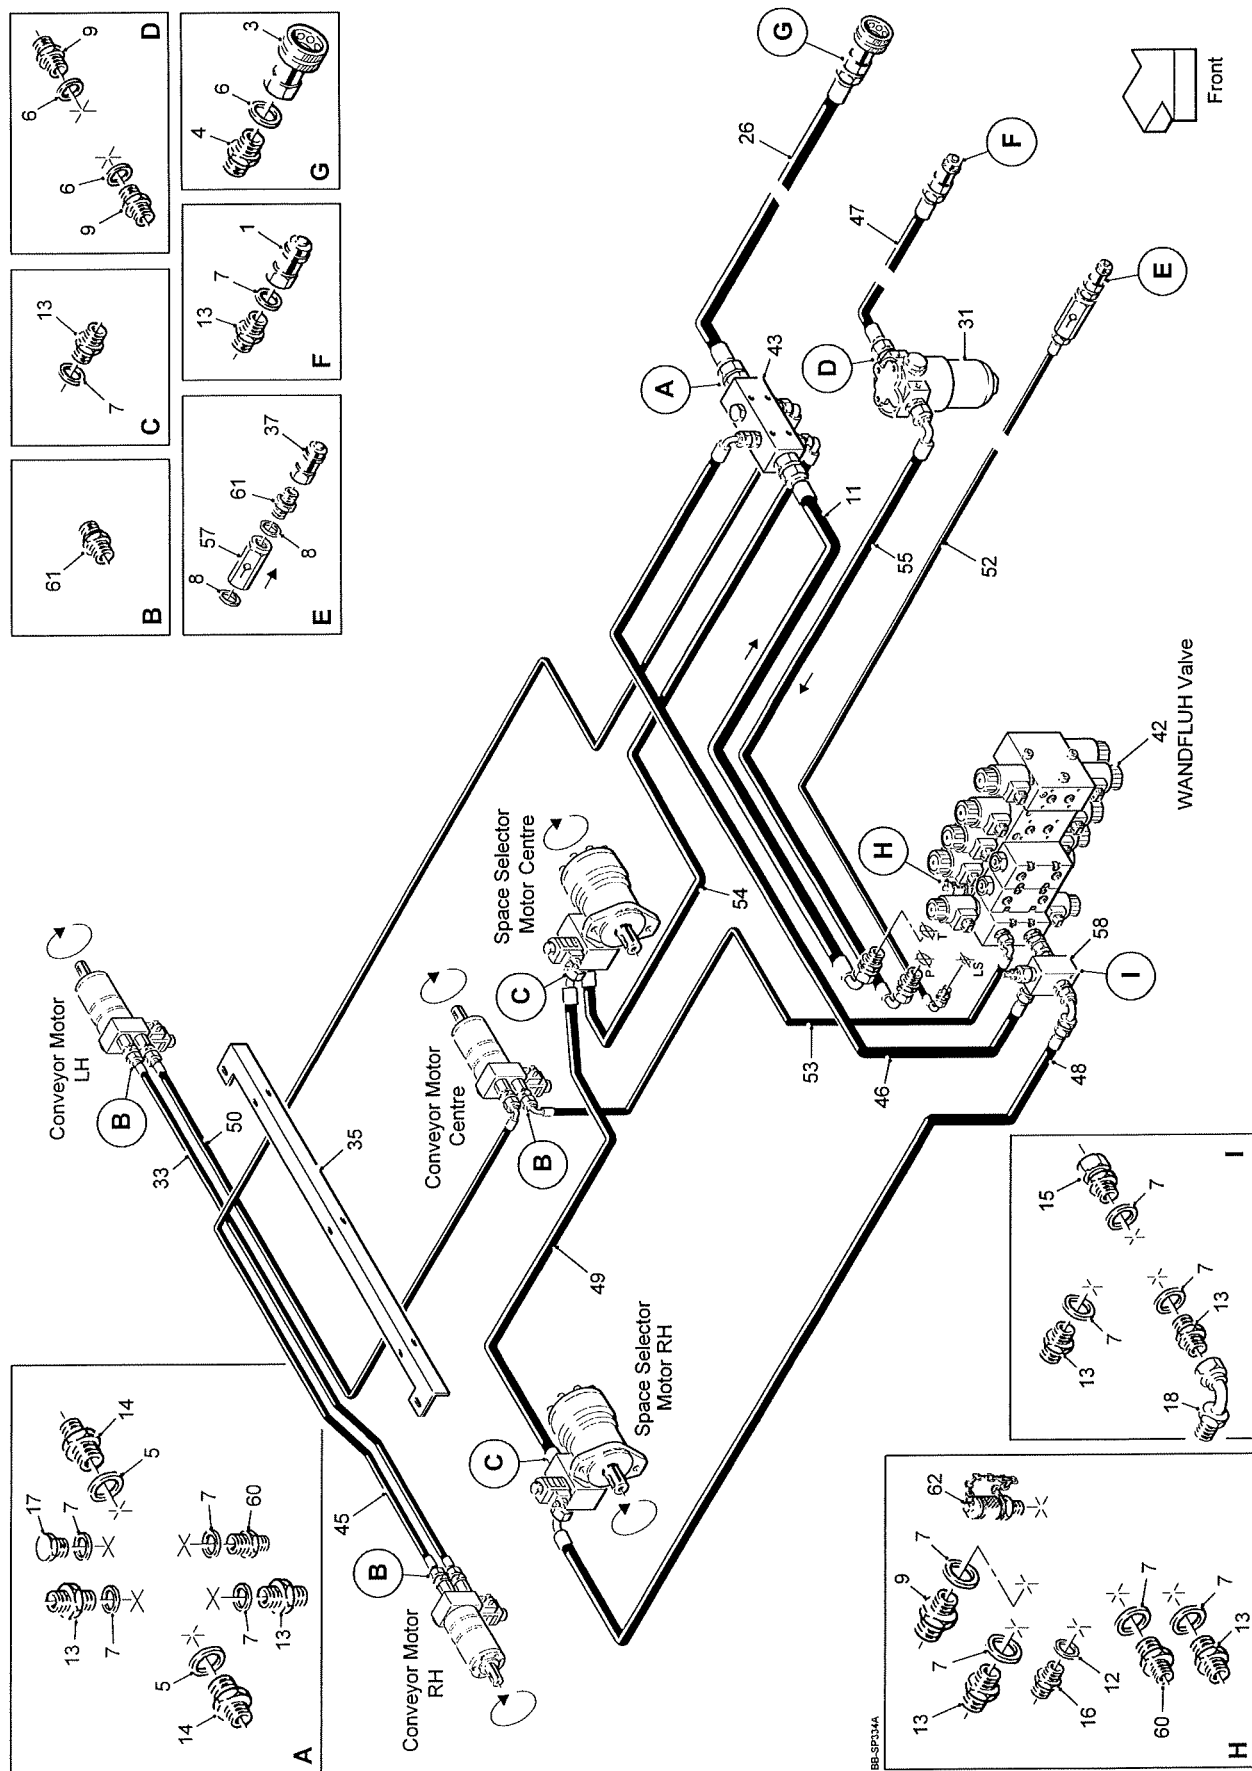

2.17a**SR SERIES PLANTER SPARE PARTS**

Machines from Serial No. SR3127

Hydraulics (space selector & conveyors)**Part of Assy No 65932**

Item	Part No.	Description	Qty.	Remarks
1	10140	1/2"BSP Male Probe	1	
2				
3	11108A	3/4"BSP Female Probe	1	
4	11115	3/4"BSP M M Adaptor	1	
5	11122	1"BSP Dowty Seal	2	
6	11123	3/4"BSP Dowty Seal	3	
7	11124	1/2"BSP Dowty Seal	16	
8	11125	3/8"BSP Dowty Seal	2	
9	11295	3/4"BSPx1/2"BSP M M Adaptor	3	
10	11336	3/8"BSPx1/4"BSP M M Adaptor	1	
11	11744	3/4"Hose Assembly (1400mm)	1	
12	11337	1/4"BSP Dowty Seal	1	
13	12315	1/2"BSP M M Adaptor	11	
14	12560	1"BSPx3/4"BSP M M Adaptor	2	
15	12602	1/2"BSP M F Swivel Adaptor	1	
16	12316	1/4"BSP M M Adaptor	1	
17	24383	1/2"BSP Blanking Plug	1	
18	26086	1/2"BSP M F Swept 90°Adaptor	1	
19				
20				
21				
22				
23				
24				
25				
26	43254	3/4"Hose Assembly (3100mm)	1	
27				
28				
29				
30				
31	46859	Pressure Filter Complete	1	
32				
33	52122	3/"Hose Assembly (1100mm)	1	
34				
35	72188	Hose Carrier	1	
36				
37	60166	3/8"BSP Male Probe	1	
38				
39				
40				
41				
42	65873W	Hydraulic Valve Bank (WANDFLUH)	1	
43	65882A	Return Manifold (6 port)	1	
44				
45	60248	3/8"Hose Assembly (2450mm)	1	
46	60433	1/2"Hose Assembly (1650mm)	1	
47	60603	1/2"Hose Assembly (3200mm)	1	
48	60528	1/2"Hose Assembly (2200mm)	1	
49	60767	1/2"Hose Assembly (1700mm)	1	
50	60894	3/8"Hose Assembly (1250mm)	1	
51				
52	71152	1/4"Hose Assembly (4800mm)	1	
53	71158	3/8"Hose Assembly (1700mm)	1	
54	71160	1/2"Hose Assembly (1800mm)	1	
55	71161	1/2"Hose Assembly (1400mm)	1	

SR SERIES PLANTER SPARE PARTS	2.17b
--------------------------------------	--------------

SR SERIES PLANTER SPARE PARTS	2.17b
--------------------------------------	--------------

Machines from Serial No. SR3127

Hydraulics (space selector & conveyors) Part of Assy No 65932

Hydraulics (space selector & conveyors) Part of Assy No 65932

[illegible]

 
SR SERIES PLANTER SPARE PARTS

2.18

Serial No. SR3120

Hydraulics (ram circuits)

Part of Assy No 65932

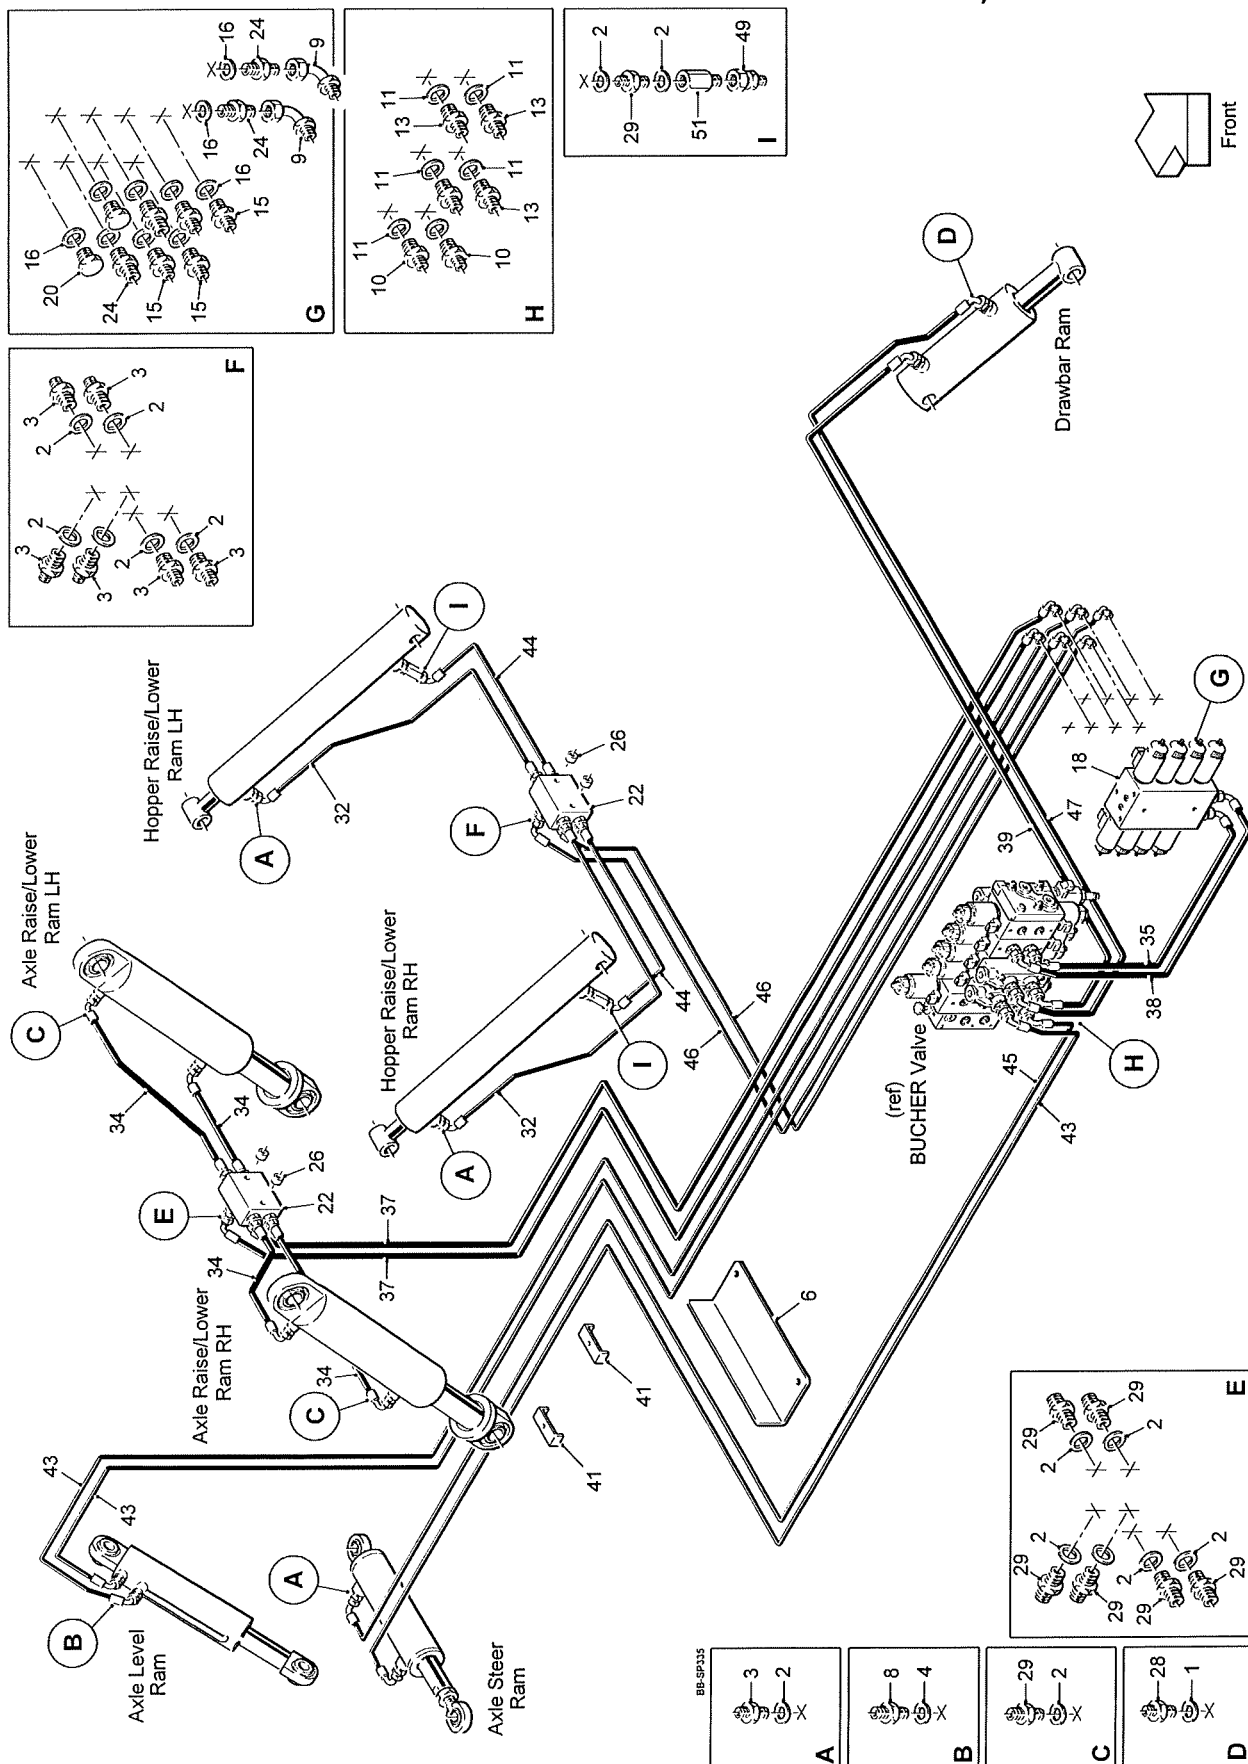

2.18a**SR SERIES PLANTER SPARE PARTS**

Serial No. SR3120

Hydraulics (ram circuits)**Part of Assy No 65932**


Item	Part No.	Description	Qty.	Remarks
1	11124	1/2"BSP Dowty Seal	2	
2	11125	3/8"BSP Dowty Seal	24	
3	11336	3/8"BSPx1/4"BSP M M Adaptor	12	
4	11337	1/4"BSP Dowty Seal	2	
5				
6	72193	Hose Tray	1	
7				
8	12316	1/4"BSP M M Adaptor	2	
9	13189	3/8"BSP M F Swept 90°Adaptor	3	
10	27460	M18x1/4"BSP M M Adaptor	2	
11	27461	M18 Dowty Seal	6	
12				
13	37599	M18x3/8"BSP M M Adaptor	4	
14				
15	44207	M14x1/4"BSP M M Adaptor	4	
16	44208	M14 Dowty Seal	10	
17				
18	59104	M14 Slave Valve (BUCHER)	1	
19				
20	60710	M14 Blanking Plug	2	
21				
22	DW801922	3/8"BSP Junction Block	2	
23				
24	RPS742	M14x3/8"BSP M M Adaptor	4	
25				
26	SS012009/015	Steel Spacer	4	
27				
28	UC25	1/2"BSPx3/8"BSP M M Adaptor	2	
29	UC31A	3/8"BSP M M Adaptor	12	
30				
31				
32	32577	1/4"Hose Assembly (1250mm)	2	
33				
34	52102	3/8"Hose Assembly (650mm)	4	
35	52249	3/8"Hose Assembly (450mm)	1	
36				
37	60333	3/8"Hose Assembly (4400mm)	2	
38	60733	3/8"Hose Assembly (550mm)	1	
39	60783	3/8"Hose Assembly (2100mm)	1	
40				
41	66175	Pipe Clamp (4x 1/4")	2	
42				
43	71096	1/4"Hose Assembly (5350mm)	3	
44	71153	1/4"Hose Assembly (600mm)	2	
45	71154	1/4"Hose Assembly (5200mm)	1	
46	71155	1/4"Hose Assembly (3700mm)	2	
47	71159	3/8"Hose Assembly (2300mm)	1	
48				
49	27894	3/8"BSPFx1/4"BSPM Swivel Adaptor	2	
50				
51	60742	3/8"BSP Hose Burst Valve	2	

SR SERIES PLANTER SPARE PARTS

2.18

Machines from Serial No. SR3127

 Hydraulics (ram circuits)
 Part of Assy No 65932

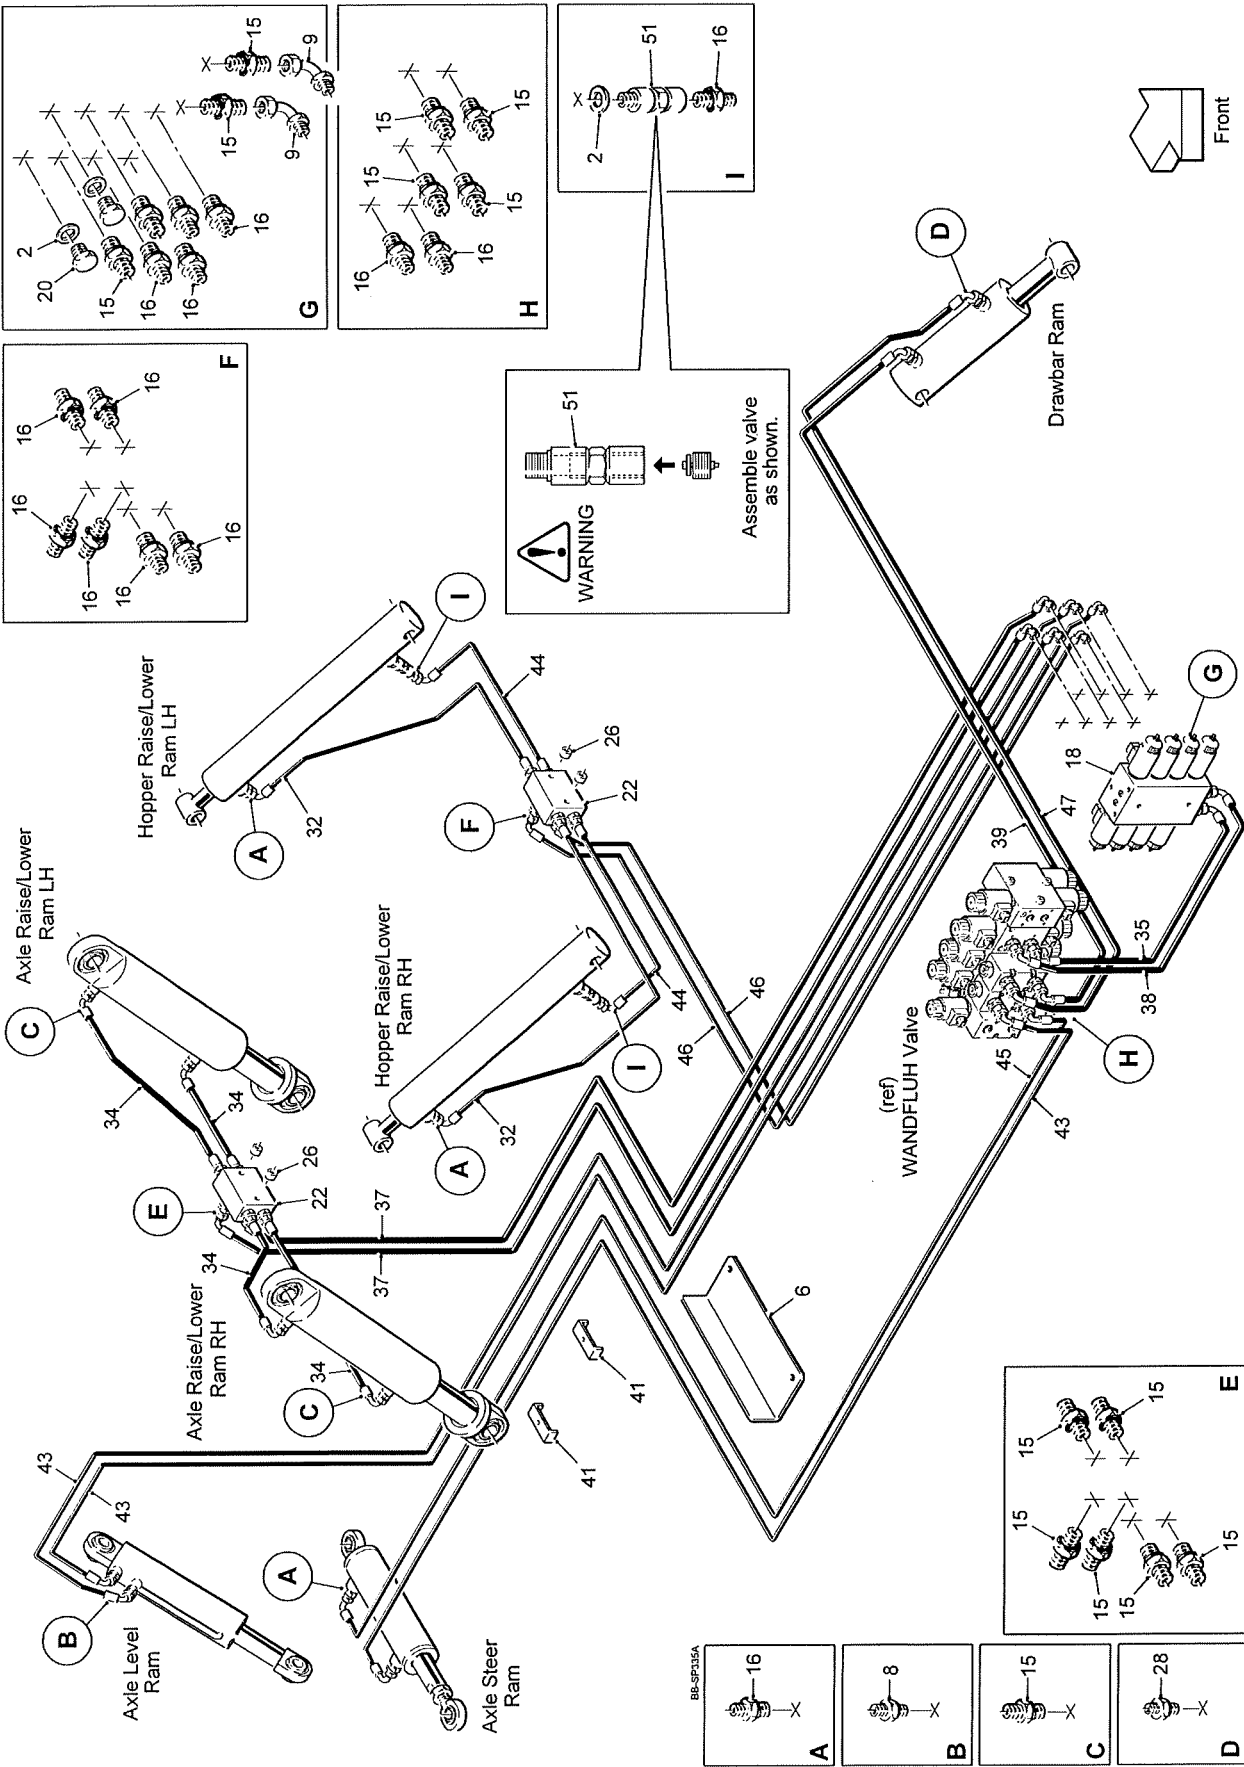

2.18a**SR SERIES PLANTER SPARE PARTS**


Machines from Serial No. SR3127

Hydraulics (ram circuits)**Part of Assy No 65932**

Item	Part No.	Description	Qty.	Remarks
1				
2	11125	3/8"BSP Dowty Seal	24	
3				
4	11337	1/4"BSP Dowty Seal	2	
5				
6	72193	Hose Tray	1	
7				
8	71178	1/4"BSP M M Adaptor c/w 1/4" Seal	2	
9	13189	3/8"BSP M F Swept 90°Adaptor	2	
10				
11				
12				
13				
14				
15	71172	3/8"BSP M M Adaptor c/w 3/8"seal	18	
16	71173	1/4"BSPx3/8"BSP M M c/w 3/8"seal	14	
17				
18	70330	3/8"BSP Slave Valve (WANDFLUH)	1	
19				
20	11293	3/8"BSP Blanking Plug	2	
21				
22	DW801922	3/8"BSP Junction Block	2	
23				
24				
25				
26	SS012009/015	Steel Spacer	4	
27				
28	71177	3/8"BSPx1/2"BSP M M c/w 1/2"Seal	2	
29				
30				
31				
32	32577	1/4"Hose Assembly (1250mm)	2	
33				
34	71076	3/8"Hose Assembly (850mm)	4	
35	52249	3/8"Hose Assembly (450mm)	1	
36				
37	60333	3/8"Hose Assembly (4400mm)	2	
38	60733	3/8"Hose Assembly (550mm)	1	
39	60783	3/8"Hose Assembly (2100mm)	1	
40				
41	66175	Pipe Clamp (4x 1/4")	2	
42				
43	71096	1/4"Hose Assembly (5350mm)	3	
44	71153	1/4"Hose Assembly (600mm)	2	
45	71154	1/4"Hose Assembly (5200mm)	1	
46	71155	1/4"Hose Assembly (3700mm)	2	
47	71159	3/8"Hose Assembly (2300mm)	1	
48				
49				
50				
51	60742	3/8"BSP Hose Burst Valve	2	

Serial No. SR3120

 Hydraulics (moulding board)
Part of Assy No 65932

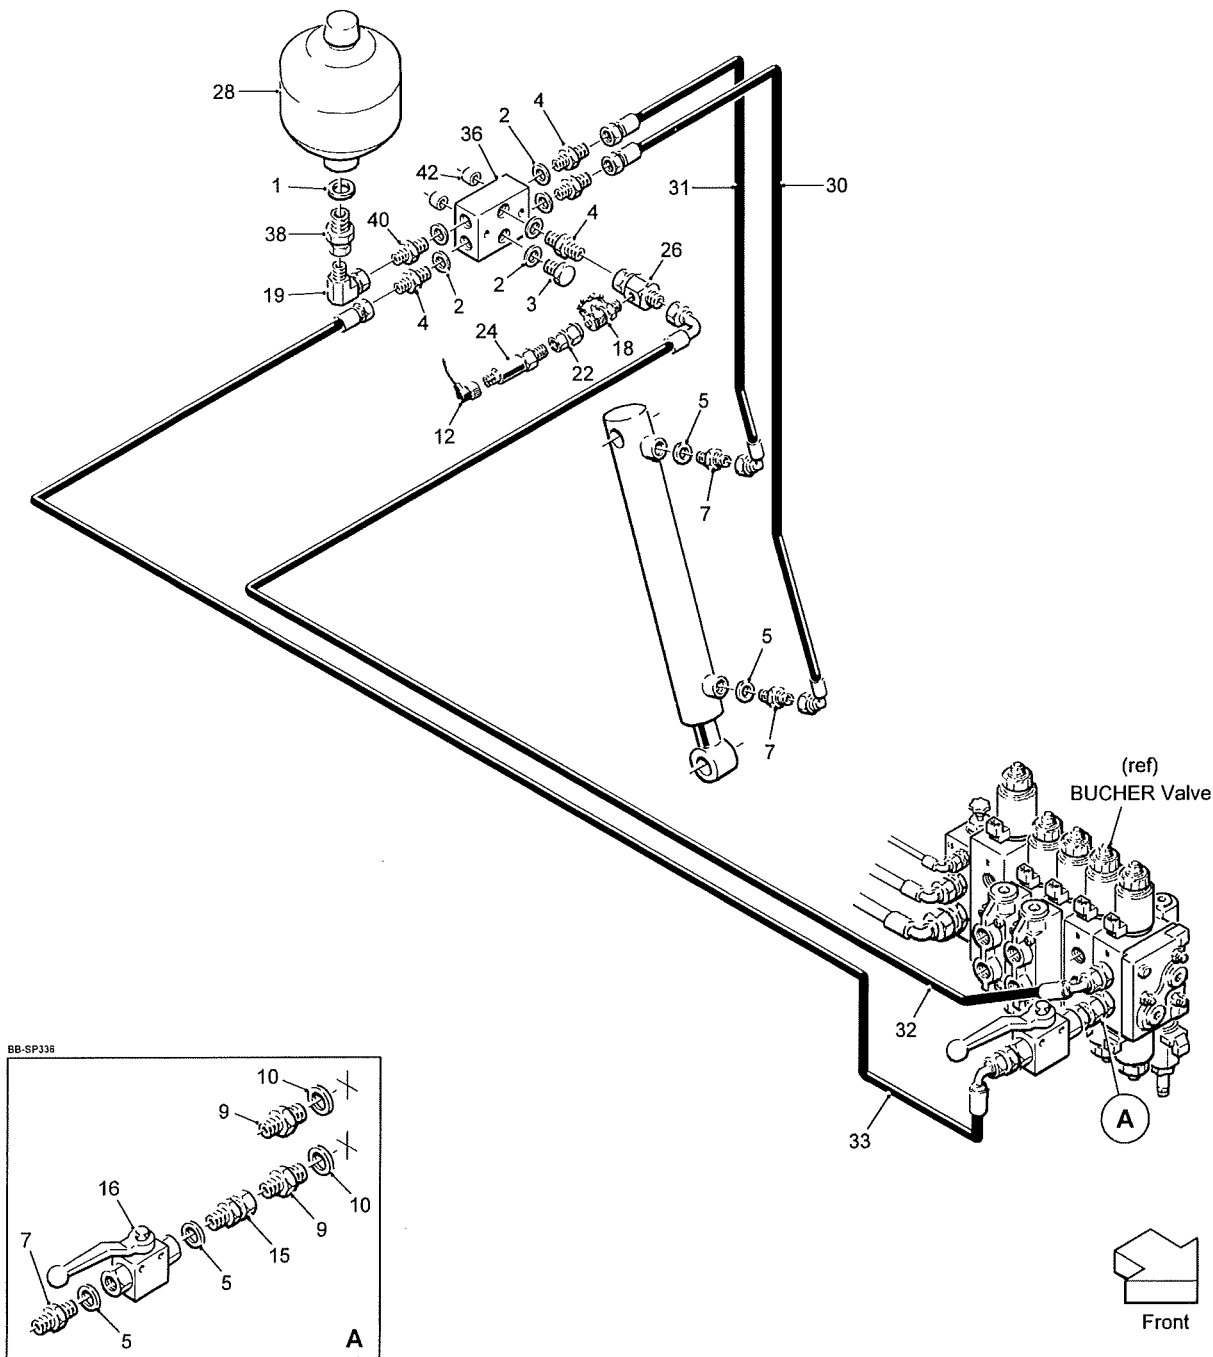

2.19a

SR SERIES PLANTER SPARE PARTS

Serial No. SR3120


Hydraulics (moulding board)

Part of Assy No 65932

Item	Part No.	Description	Qty.	Remarks
1	11124	1/2"BSP Dowty Seal	2	
2	11125	3/8"BSP Dowty Seal	6	
3	11293	3/8"BSP Blanking Plug	1	
4	11336	1/4"BSPx3/8"BSP M M Adaptor	4	
5	11337	1/4"BSP Dowty Seal	4	
6				
7	12316	1/4"BSP M M Adaptor	3	
8				
9	27460	M18x1/4"BSP M M Adaptor	2	
10	27461	M18 Dowty Seal	2	
11				
12	32037/2	Sensor Cable 90° (5m)	1	
13				
14				
15	41484	1/4"BSP M F Swivel Adaptor	1	
16	41485	1/4"BSP Shut-Off Valve	1	
17				
18	42305	Gauge Port	1	
19	42343	3/8"BSP M F Compact 90°Adaptor	1	
20				
21				
22	46960	Adaptor	1	
23				
24	51270	Pressure Transmitter	1	
25				
26	60161C	1/4"BSP F M c/w 1/8"BSP Port	1	
27				
28	65810	Accumulator	1	
29				
30	71080	1/4"Hose Assembly (800mm)	1	
31	71153	1/4"Hose Assembly (600mm)	1	
32	71156	1/4"Hose Assembly (3600mm)	1	
33	71157	1/4"Hose Assembly (3500mm)	1	
34				
35				
36	DW801992	3/8"BSP Junction Block	1	
37				
38	KA17325	3/8"BSPFx1/2"BSPM Swivel Adaptor	2	
39				
40	UC31A	3/8"BSP M M Adaptor	1	
41				
42	SS012009/015	Steel Spacer	2	

Machines from Serial No. SR3127

 Hydraulics (moulding board)
Part of Assy No 65932

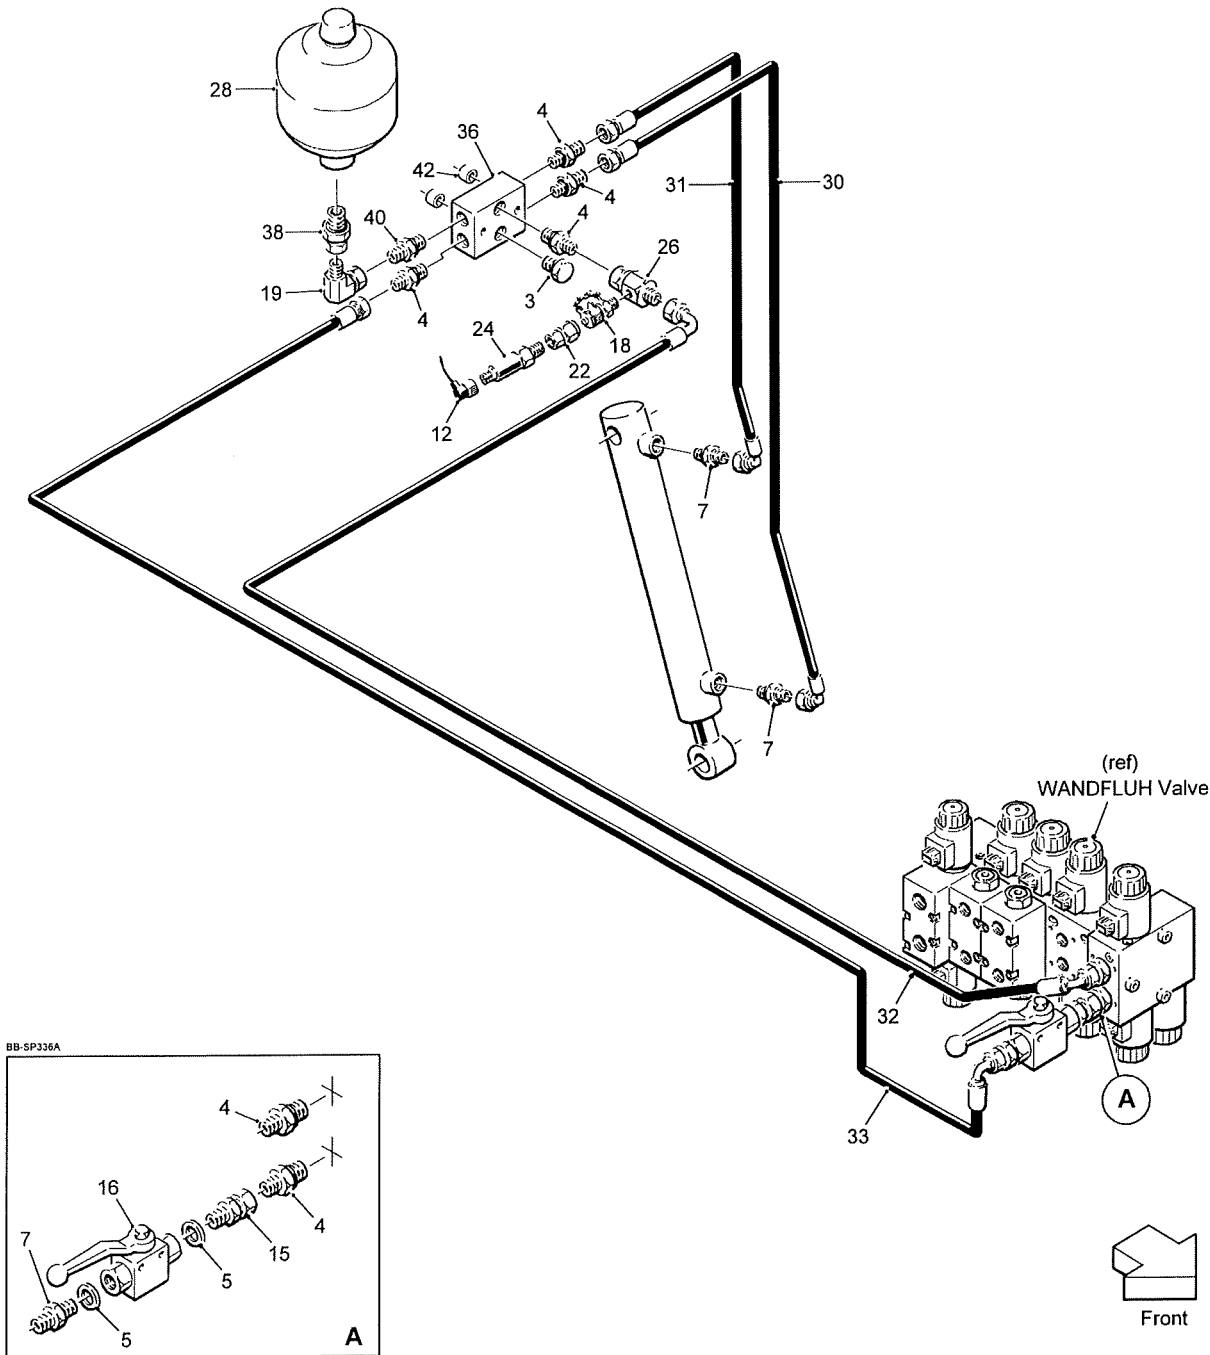

2.19a**SR SERIES PLANTER SPARE PARTS**


Machines from Serial No. SR3127

Hydraulics (moulding board)**Part of Assy No 65932**

Item	Part No.	Description	Qty.	Remarks
1				
2				
3	71176	3/8"BSP Blanking Plug c/w 3/8"seal	1	
4	71173	1/4"BSPx3/8"BSP M M c/w 3/8"seal	6	
5	11337	1/4"BSP Dowty Seal	2	
6				
7	71178	1/4"BSP M M Adaptor c/w 1/4"seal	2	
8				
9				
10				
11				
12	32037/2	Sensor Cable 90° (5m)	1	
13				
14				
15	41484	1/4"BSP M F Swivel Adaptor	1	
16	41485	1/4"BSP Shut-Off Valve	1	
17				
18	42305	Gauge Port	1	
19	42343	3/8"BSP M F Compact 90°Adaptor	1	
20				
21				
22	46960	Adaptor	1	
23				
24	51270	Pressure Transmitter	1	
25				
26	60161C	1/4"BSP F M c/w 1/8"BSP Port	1	
27				
28	65810	Accumulator	1	
29				
30	71080	1/4"Hose Assembly (800mm)	1	
31	71153	1/4"Hose Assembly (600mm)	1	
32	71156	1/4"Hose Assembly (3600mm)	1	
33	71157	1/4"Hose Assembly (3500mm)	1	
34				
35				
36	DW801992	3/8"BSP Junction Block	1	
37				
38	71175	3/8"BSPFx1/2"BSPM Swivel Adaptor	2	c/w 1/2"seal
39				
40	71172	3/8"BSP M M Adaptor c/w 3/8"seal	1	
41				
42	SS012009/015	Steel Spacer	2	

Road Lights

 Assy No 65995

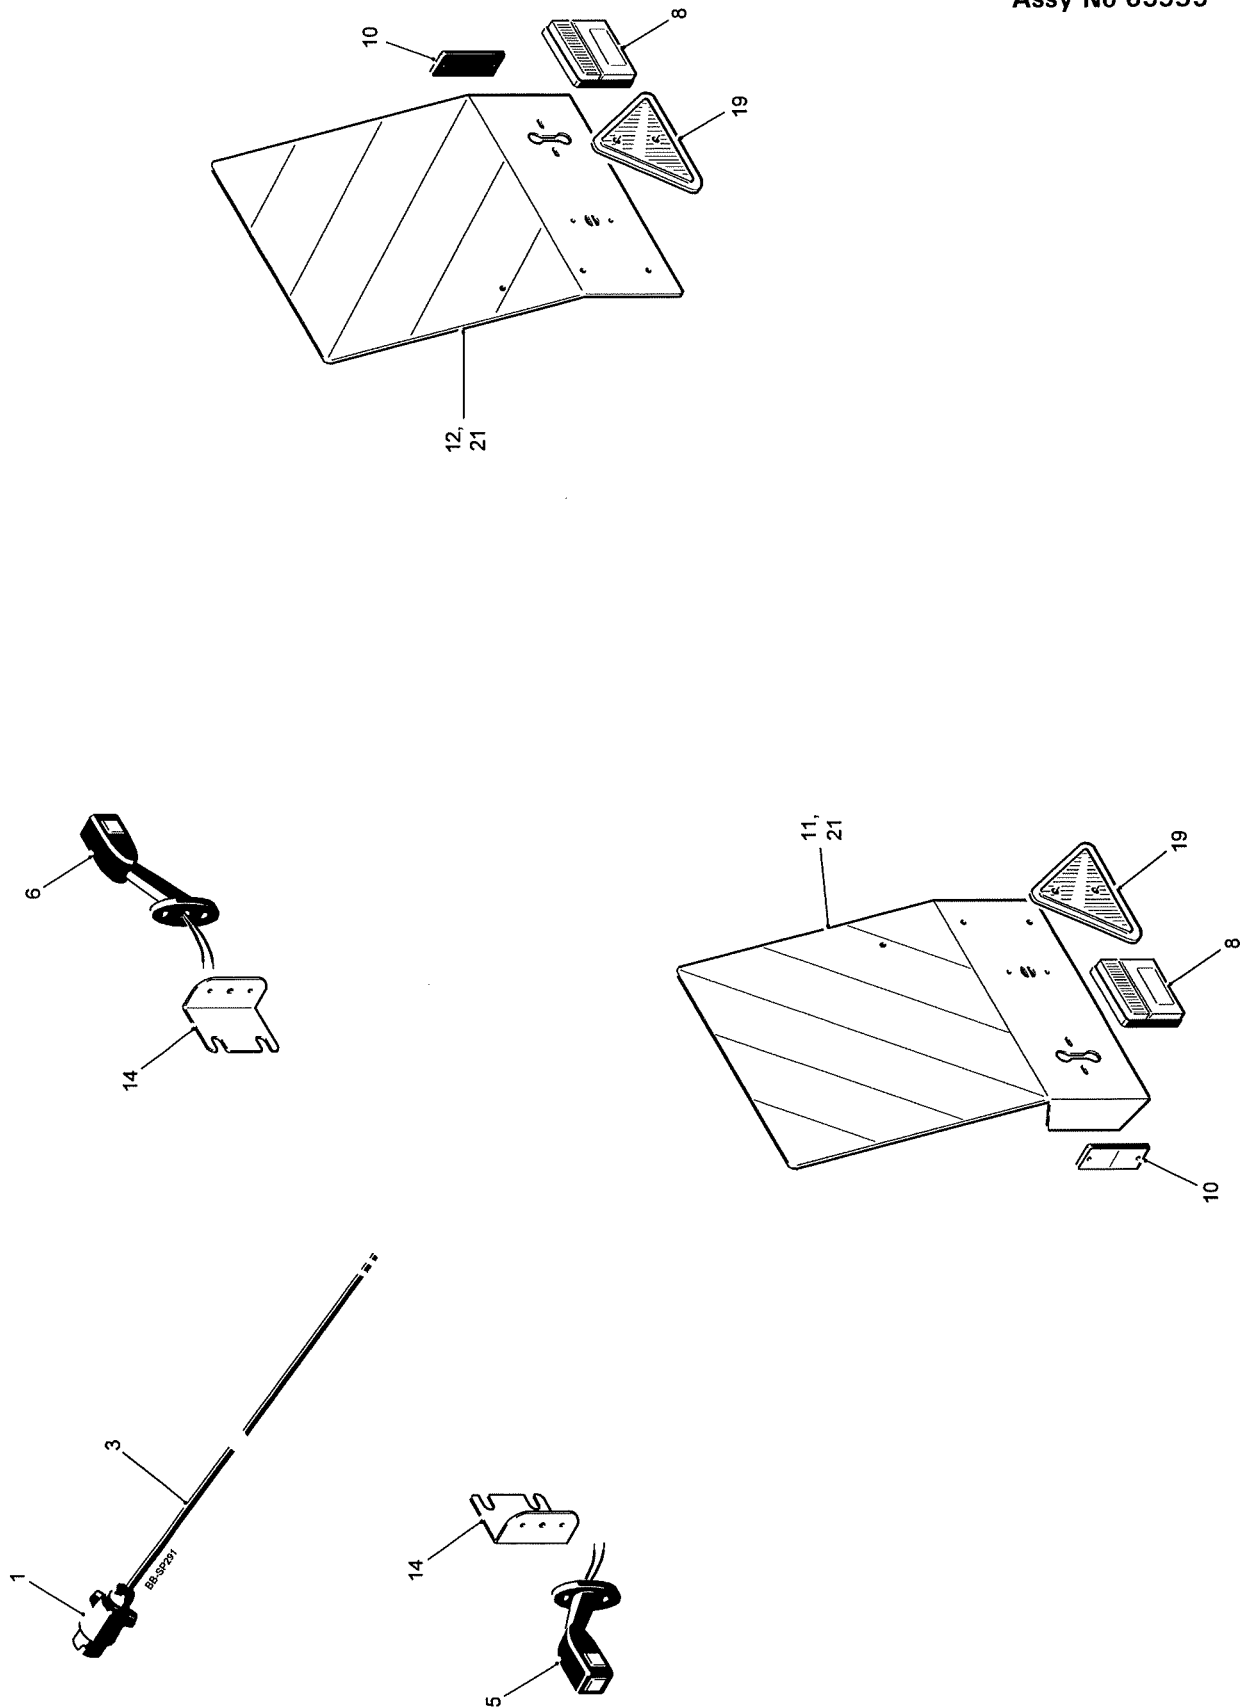

2.20a



SR SERIES PLANTER SPARE PARTS

Road Lights

Assy No 65995

Item	Part No.	Description	Qty.	Remarks
1	10134	7-Pin Plug	1	
2				
3	11369	7-Core Cable	a/r	
4				
5	50111	Front Marker Light LH	1	
6	50112	Front Marker Light RH	1	
7				
8	62217A	LED Rear Light	2	
9				
10	65704	Amber Reflector	2	
11	65877	Light Board LH	1	
12	65878	Light Board RH	1	
13				
14	72000	Marker Light Bracket	2	
15				
16				
17				
18				
19	RPE272.307748	Reflector Triangle	2	
20				
21	TR496	Red/White Stripe Reflector Decal	2	

  Automatic Space Selector

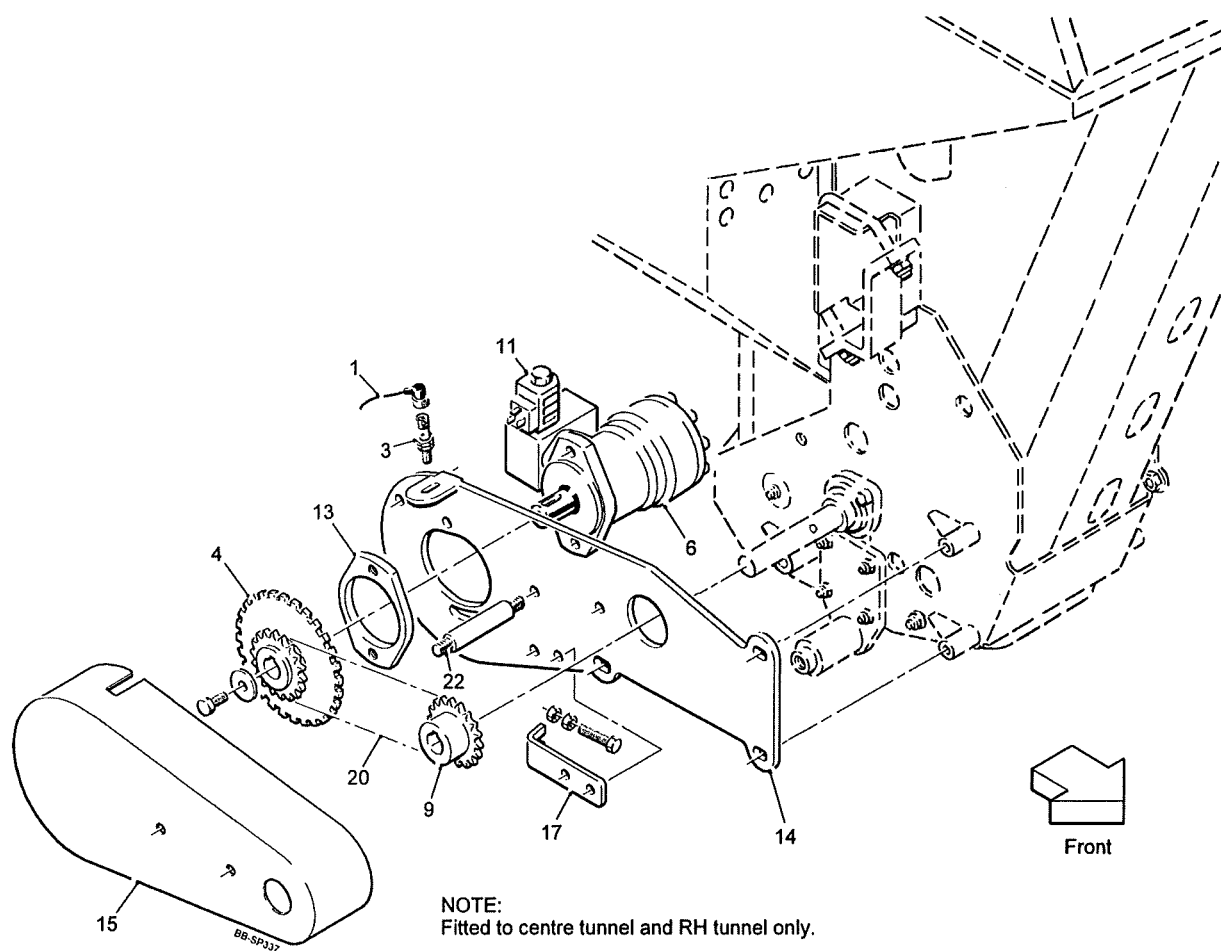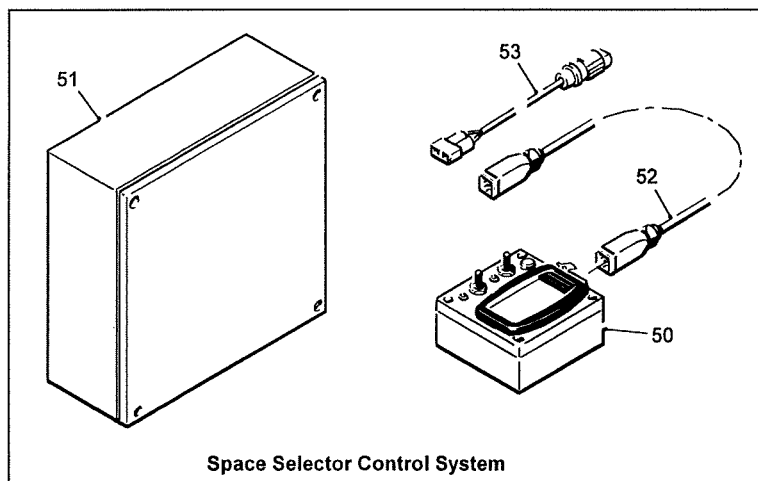


2.22a

SR SERIES PLANTER SPARE PARTS

Automatic Space Selector

Item	Part No.	Description	Qty.	Remarks
1	32037/2	Sensor Cable 90° (5m)	2	
2				
3	36124	Proximity Sensor	2	
4	36131A	Sensor Wheel & Sprocket	2	
5				
6	46855	Hydraulic Motor (200cc)	2	
7				
8				
9	43120	18T 1/2"Pitch Sprocket	2	
10				
11	52406	Motor Control Valve	2	
12				
13	65134	Motor Clamp Plate	2	
14	65559	Motor Mounting	2	
15	65560	Chain Guard	2	
16				
17	72112	Motor Adjuster	2	
18				
19				
20	PH526/62	1/2"Pitch Drive Chain	2	
21				
22	SP279M	Guard Bolt	4	
	-	Space Selector Control System Consists Of:		
50	65458	Touch Screen Control Box	1	
51	-	Distribution Box	1	
52	-	Link Loom	1	
53	65461	Power Lead	1	

 Depth Indicator
Assy No 65982

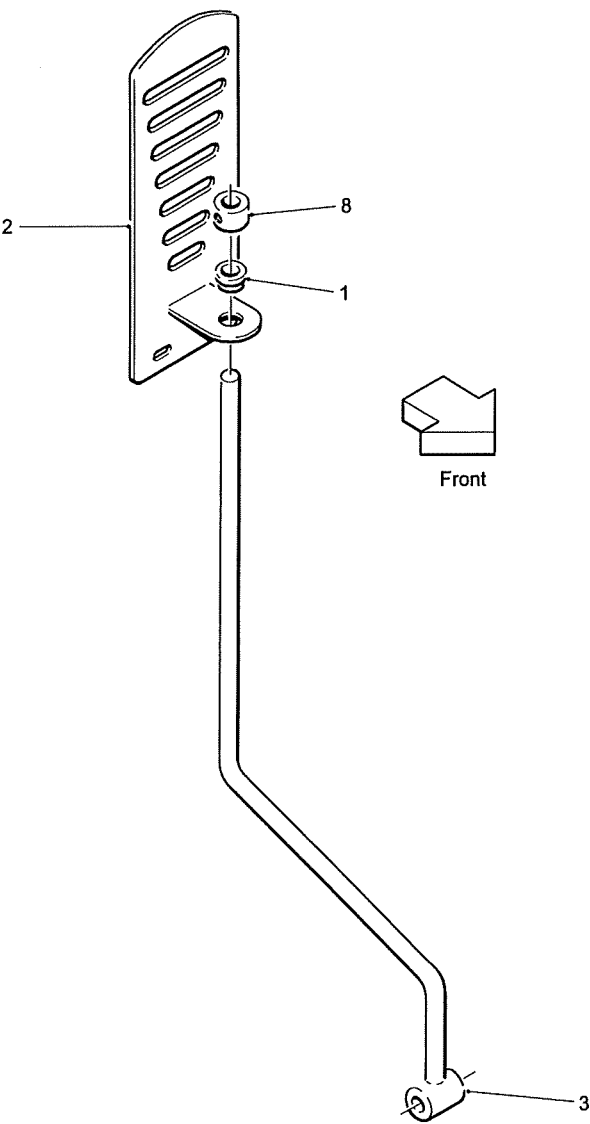

2.25a

SR SERIES PLANTER SPARE PARTS

Depth Indicator

Assy No 65982

Item	Part No.	Description	Qty.	Remarks
1	65813	Bush	1	
2	65908	Depth Indicator Plate	1	
3	65909	Indicator Rod	1	
4				
5				
6				
7				
8	DWS158	Collar	1	